



SA1 - Hardware Description Stand - Alone 1 Relay
SA3 - Hardware Description Stand - Alone 3 Relay

QTY	DESCRIPTION	
1 per system	<p><i>Fingerprint Scanner - (used for enrollment & authentication)</i></p> <ul style="list-style-type: none"> • Is an outside unit that has dual purpose: a) user enrollment; b) user authentication • It should be installed in a location that is visible and easy accessible to users. • The unit is spray-waterproof, and as such the mounting location should provide adequate protection against heavy rain, snow, showers, and intense sunshine exposure. • To ensure proper operation of the fingerprint scanner, it should be installed at the proper height from the ground to the center of the rough-in box (62"). • The fingerprint scanner is connected to the control unit by 4 conductors (2 data and 2 power). Please refer to the wiring diagram for more info 	
1 per system	<p><i>Control Unit – (used for relay control and programming)</i></p> <ul style="list-style-type: none"> • Is an inside unit that has dual purpose: a) system programming; b) relay control • It should be installed away in a separate and controlled location to prevent tampering. • The control unit has 1 or 3 relays (SA1 or SA3). • The control unit provides contact closures with normally open and normally closed relays (NO and NC) • Each relay can be connected to any electrical device or lock such as door strike, magnetic lock, garage door, etc. (Note: these are not supplied by Holovision) 	
1 per system	<p><i>Power Supply –</i></p> <ul style="list-style-type: none"> • The system is shipped with a 9 VAC power supply. • Power is applied to the Control Unit (inside unit). • Fingerprint Scanner (outside unit) is powered by the control unit (inside unit) using 2 conductors. • If battery operation is desired, the system can operate on regulated 12 VDC. 12VDC power supply is not included. 	