




# INSTALLATION INSTRUCTIONS

**Manual Type 6.5.0.3-RF**  
 Viking E-10 & C-2000B  
 with Essex "ASCII" Keypad

**For Models** \_\_\_\_\_

400-A-VIK(E10) 401-A-VIK(E10)  
 403-A-VIK(E10) 404-A-VIK(E10)  
 410-A-VIK(E10) 411-A-VIK(E10)

Specifications	
<p><b>Communication</b></p> <p>Viking E-10 Doorbox uses "half-duplex" communication, allowing for high speaker and microphone volume, without the possibility of feedback.</p>	<p><b>Access Control</b></p> <p>Essex K1-26I Keypad field configurable to ASCII, Wiegand and others.            C-2000b can open 4 doors</p>

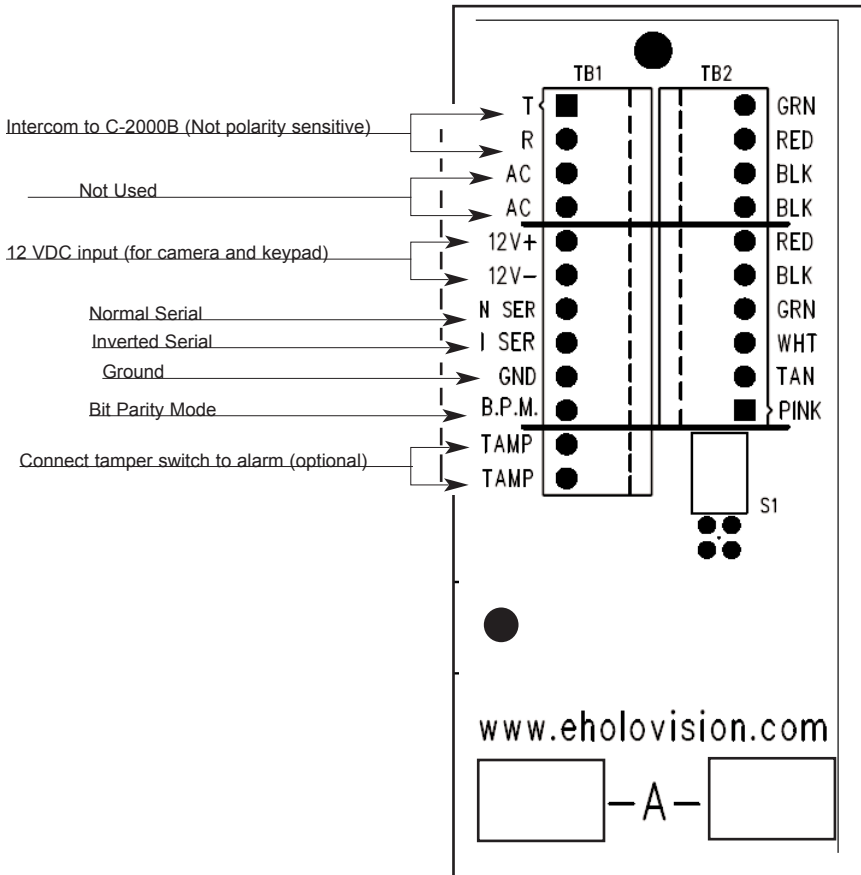


400 Series "A" Junction Board


501 E. Goetz Ave.  
 Santa Ana, Ca 92707  
[www.eholovision.com](http://www.eholovision.com)  
 Ph. 714-434-6904  
 Fax 800-362-0002

**HOLOVISION**

# ASCII Connection to Crestron or HAI 400

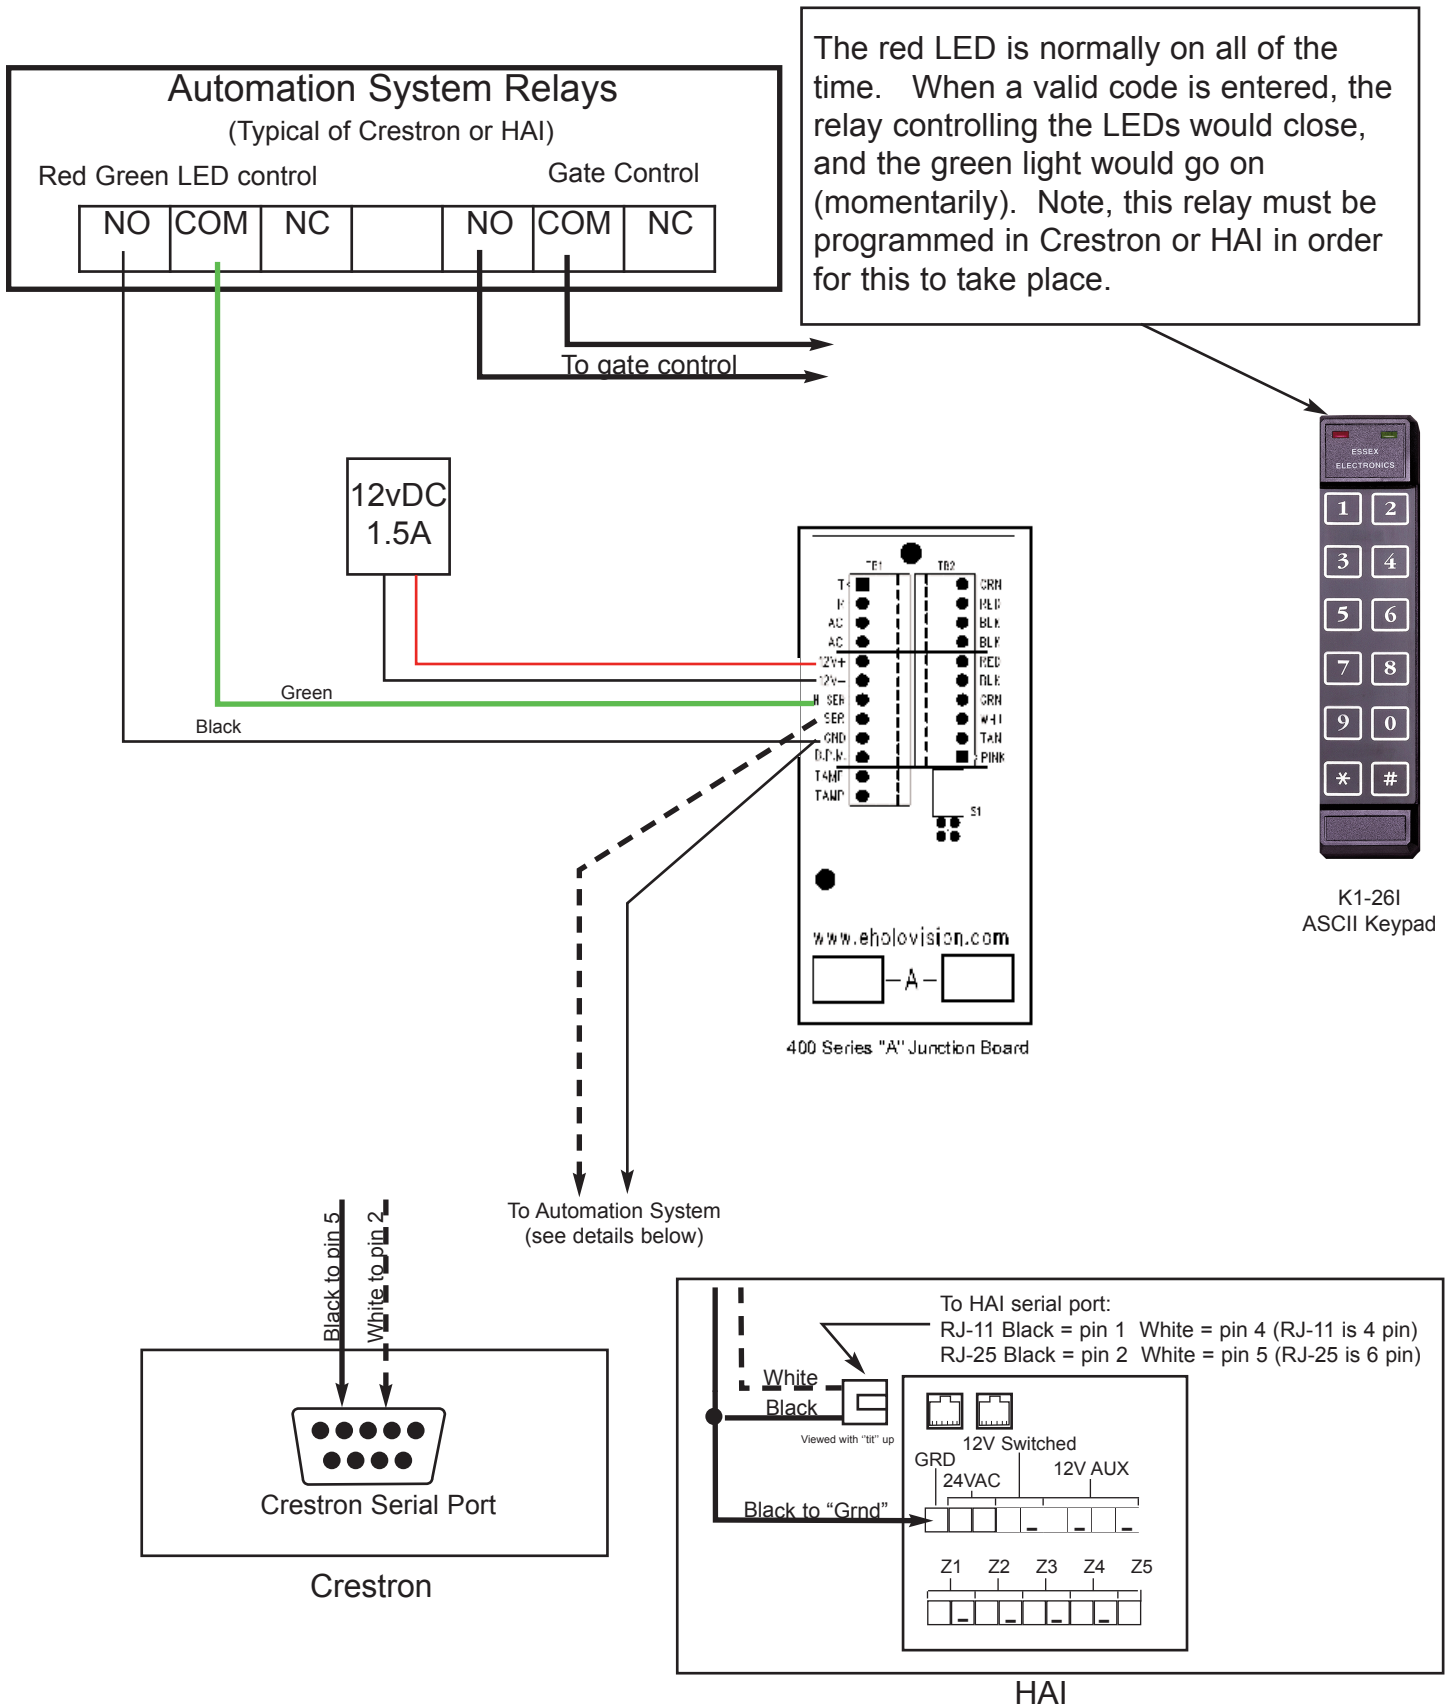

# Viking C-2000B Wiring Diagram

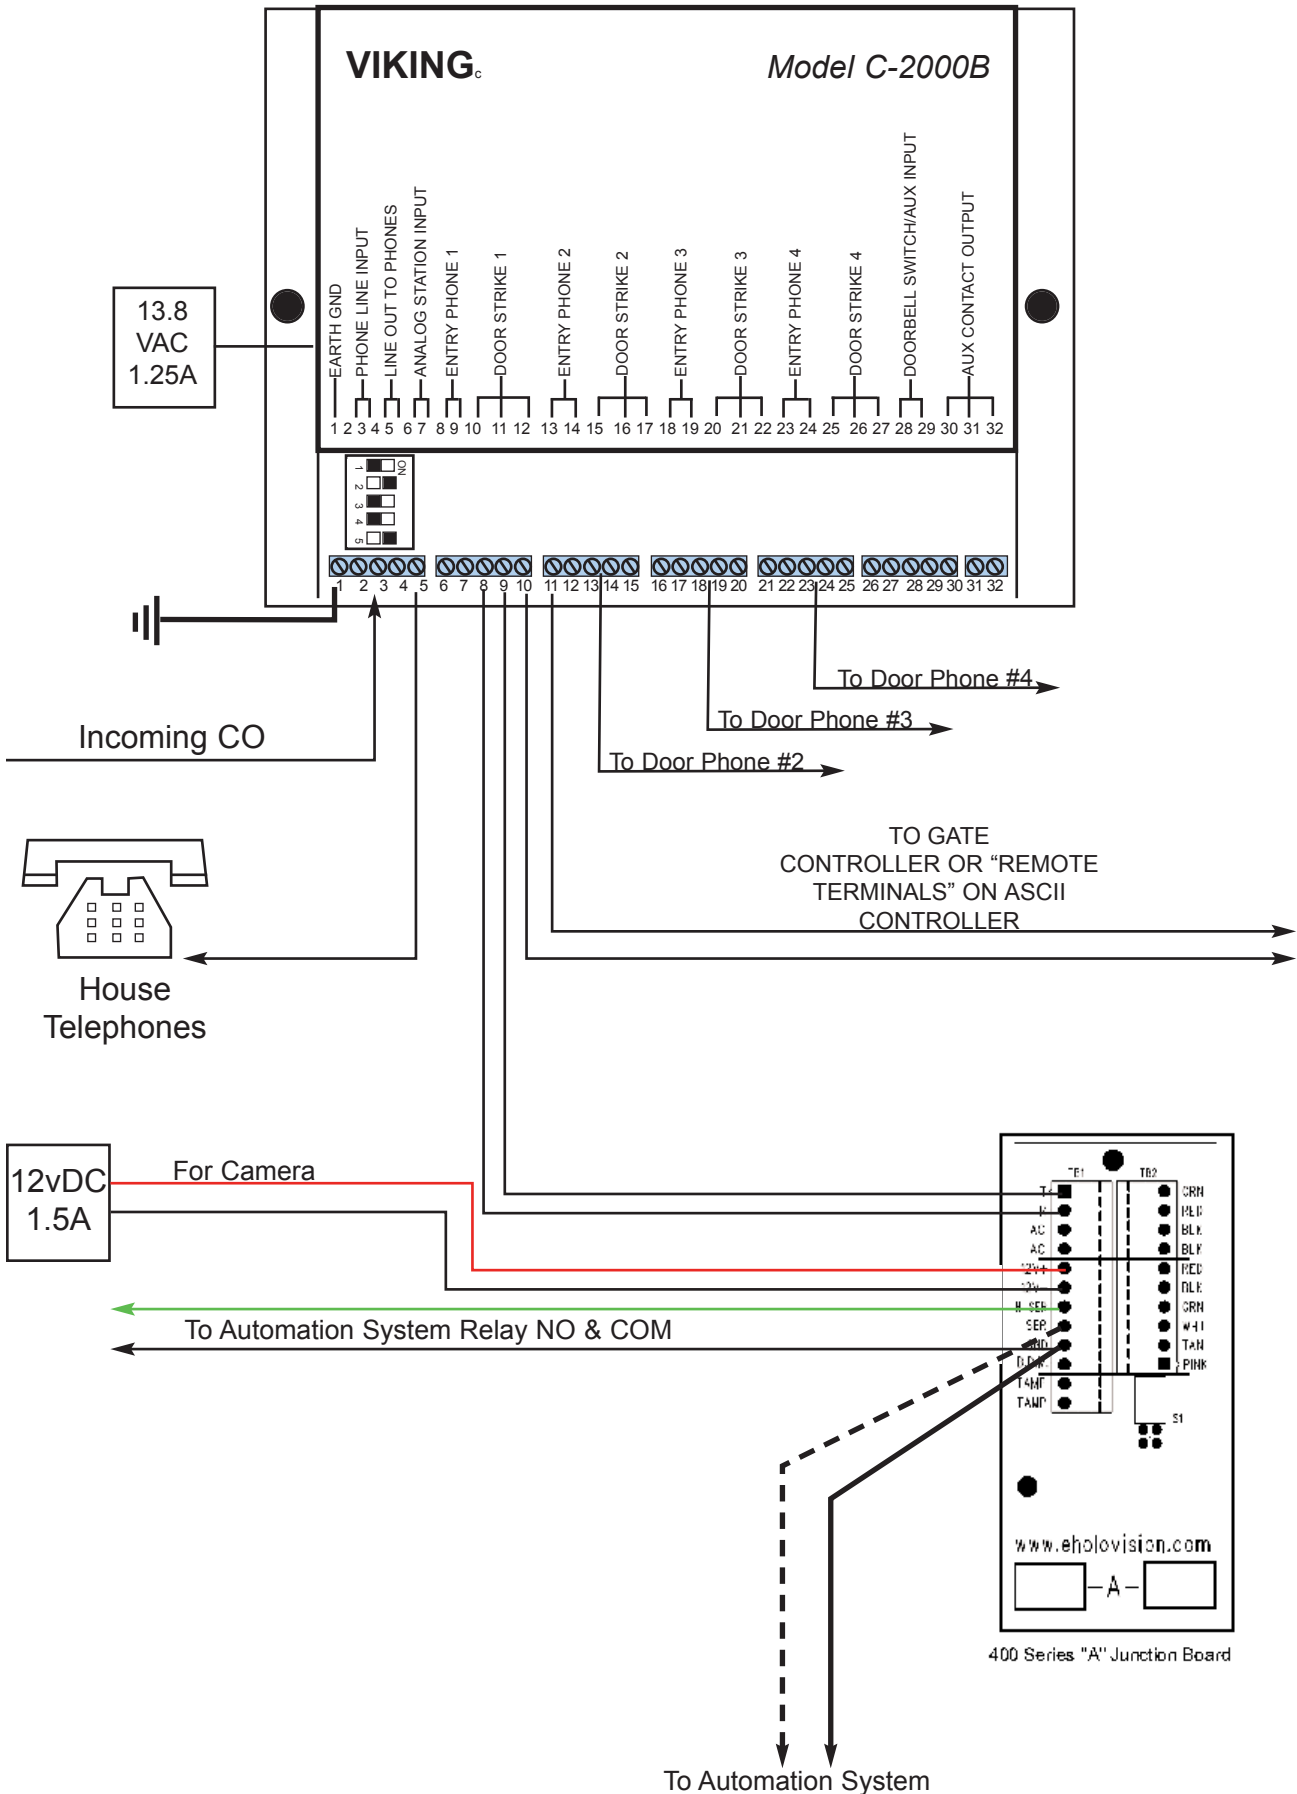

# Doorphone Programming


## Instructions for E-10 and E-40 Doorphones

### Microphone Volume

In certain noisy locations (traffic or wind), the microphone volume may need to be decreased. A symptom of this is one-way talk path, in which the distant party cannot be heard over the speaker. A "MIC VOL" adjustment is provided on the doorphone for increasing or decreasing the microphone volume.

### Speaker Volume

The "SPKR VOL" pot can be adjusted to increase or decrease the speaker volume to the desired level.

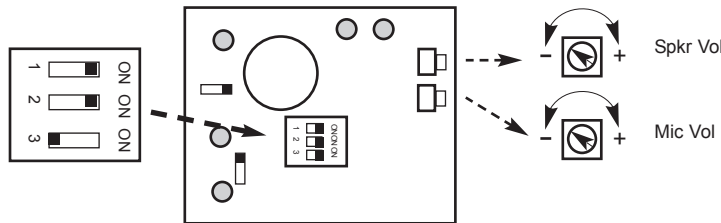


### Dip Switch Settings

DIP Switch	Position	Description
1	ON	Auto Answer - Doorphone answers when incoming call is detected.
2	ON	Call Timer - See E-10 manual for a description of this feature. Recommended setting is "ON". This is the factory default.
3	OFF	Programming Mode - E-10 is factory pre-set, and normally does not need re-programming. Refer to E-10 manual (Viking document which is included) for details

Holovision recommends the default settings on the dip switches. See the E-10 or E-40 manual for more information.
 
## Instructions for C-2000B Controller



### Dip Switch Settings C-2000B

DIP Switch	Position	Description
1	OFF	Auxiliary Contact Mode
1	ON	Doorbell Mode- Factory Default
2	OFF	Normal Operation Mode- Factory Default
2	ON	Security Code Bypass Mode
3	OFF	Entry Phone automatic disconnect (CPC) disabled
3	ON	Entry Phone automatic disconnect (CPC) enabled- Factory Default
4	OFF	Entry Phone busy signal disabled
4	ON	Entry Phone busy signal enabled- Factory Default
5	OFF	Single Line Ring Through Mode- Factory Default
5	ON	Analog Station Dial Through Mode

# Instructions for C-2000 Controller

The C-2000 controller is factory set to work right out of the box. If customization of the default settings is required, see the steps listed below. Refer to the C-2000 manual for additional options

## Access Programming Mode (Local Access)

STEP	ACTION
1	Move DIP switch 2 from OFF to ON position.
2	Come off-hook with any house phone connected to terminals 4 & 5 <b>LINE OUT TO PHONES</b> .
3	Double beep indicates accessing the programming mode.
4	You can now program the C-2000A. The features covered in this manual are <b>Maximum Doorphone Ring Count</b> and <b>Door Strike Activation Time</b> . For information on programming other features see the Viking C-2000 manual.
5	Move DIP switch 2 back to the <b>OFF</b> position.

## Maximum Doorphone Ring Count - Factory Default is 5 Rings

STEP	ACTION
1	Follow steps 1-3 from " <b>Access Programming Mode</b> " (above).
2	At "double beep" enter desired number of rings, followed by #61. Example: For 7 rings, enter "07#61".
3	Hang up the phone.

## Program Gate Strike Relays - Factory Default is 0.5 Seconds

STEP	ACTION
1	Follow steps 1-3 from " <b>Access Programming Mode</b> " (above).
2	At "double beep" enter desired number of seconds of strike activation, followed by: #19 for Gate 1, #29 for Gate 2, #39 for Gate 3, #49 for Gate 4 Examples: Set Gate 1 for 8 seconds (08#19); Set Gate 3 for 15 seconds (15#39)
3	Hang up the phone.

## Operation Instructions for C-2000B Controller

### ANSWER A CALL FROM DOORBOX

When the phones ring, pick up a phone to be connected to the visitor.

### PLACING CO LINE CALLS ON HOLD (CALL WAITING)

If a phone call is in progress, and a doorbox is activated, one to four beeps will be heard (indicating which doorphone is calling). To place the call in progress on hold and speak to the visitor, push #. When you want to return to the original phone call, push #.

### ACTIVATING A DOORSTRIKE OR OPENING A GATE

When a call is in progress, press \*#\* open the gate and return to the original call. If you do not want to open the gate, press # to return to the original call.

Strike can be activated with out the need of a "call-first" to the entry phone. Refer to the list below for codes for specific entry relays.

Entry Relay	Strike Code
1	#1**
2	#2**
3	#3**
4	#4**

