

INSTALLATION INSTRUCTIONS

Manual Type 11.2.0.13-RF

RING Intercom with IEI S-12 "Stand Alone" Keypad

For Models

1041-S12-RING


Specifications

Communication

Ring Elite Pro

Access Control

IEI "stand-alone" 12 button keypad
1 relay
500 users
12 VDC power supply included

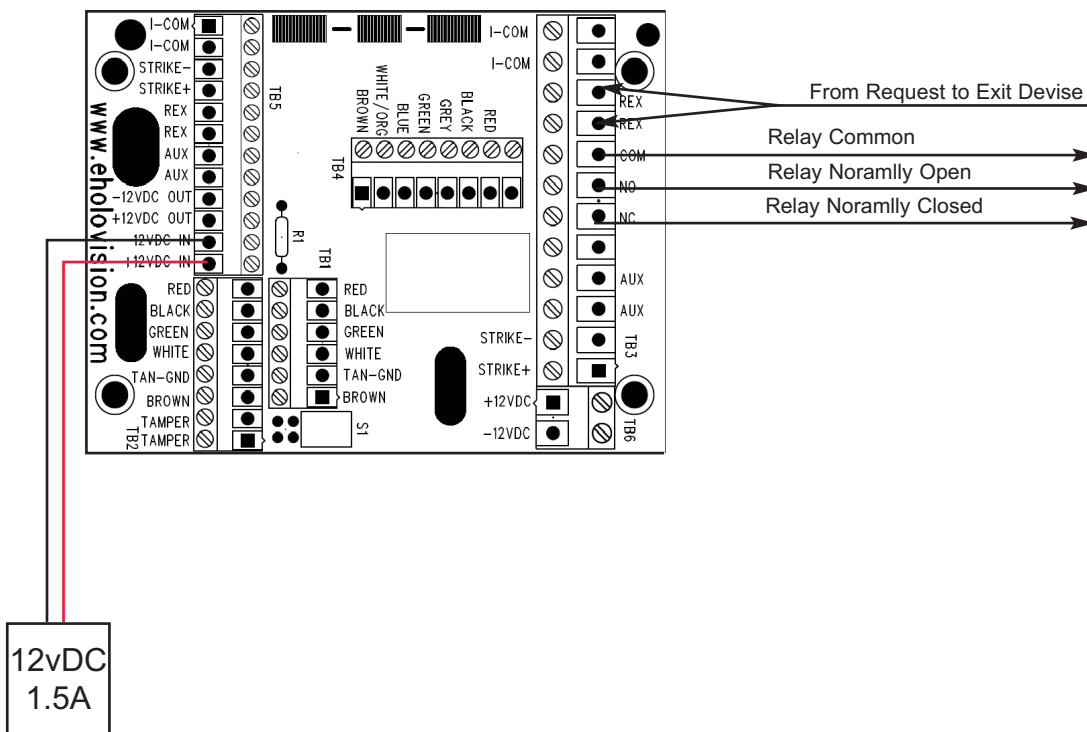


**501 E. Goetz Ave.
Santa Ana, Ca 92707**

www.eholovision.com


Ph. 714-434-6904
Fax 800-362-0002

HOLOVISION

RING LEO Controller

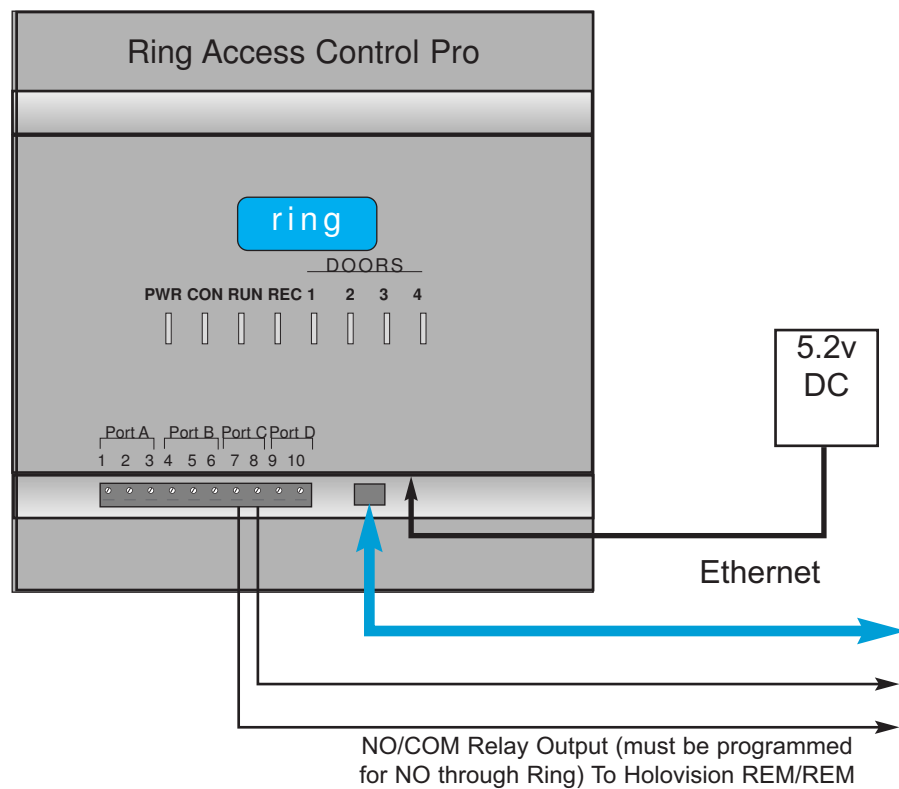

To setup your RING LEO controller please contact RING at
ring-acp-device-support@amazon.com
1(888)255-1041

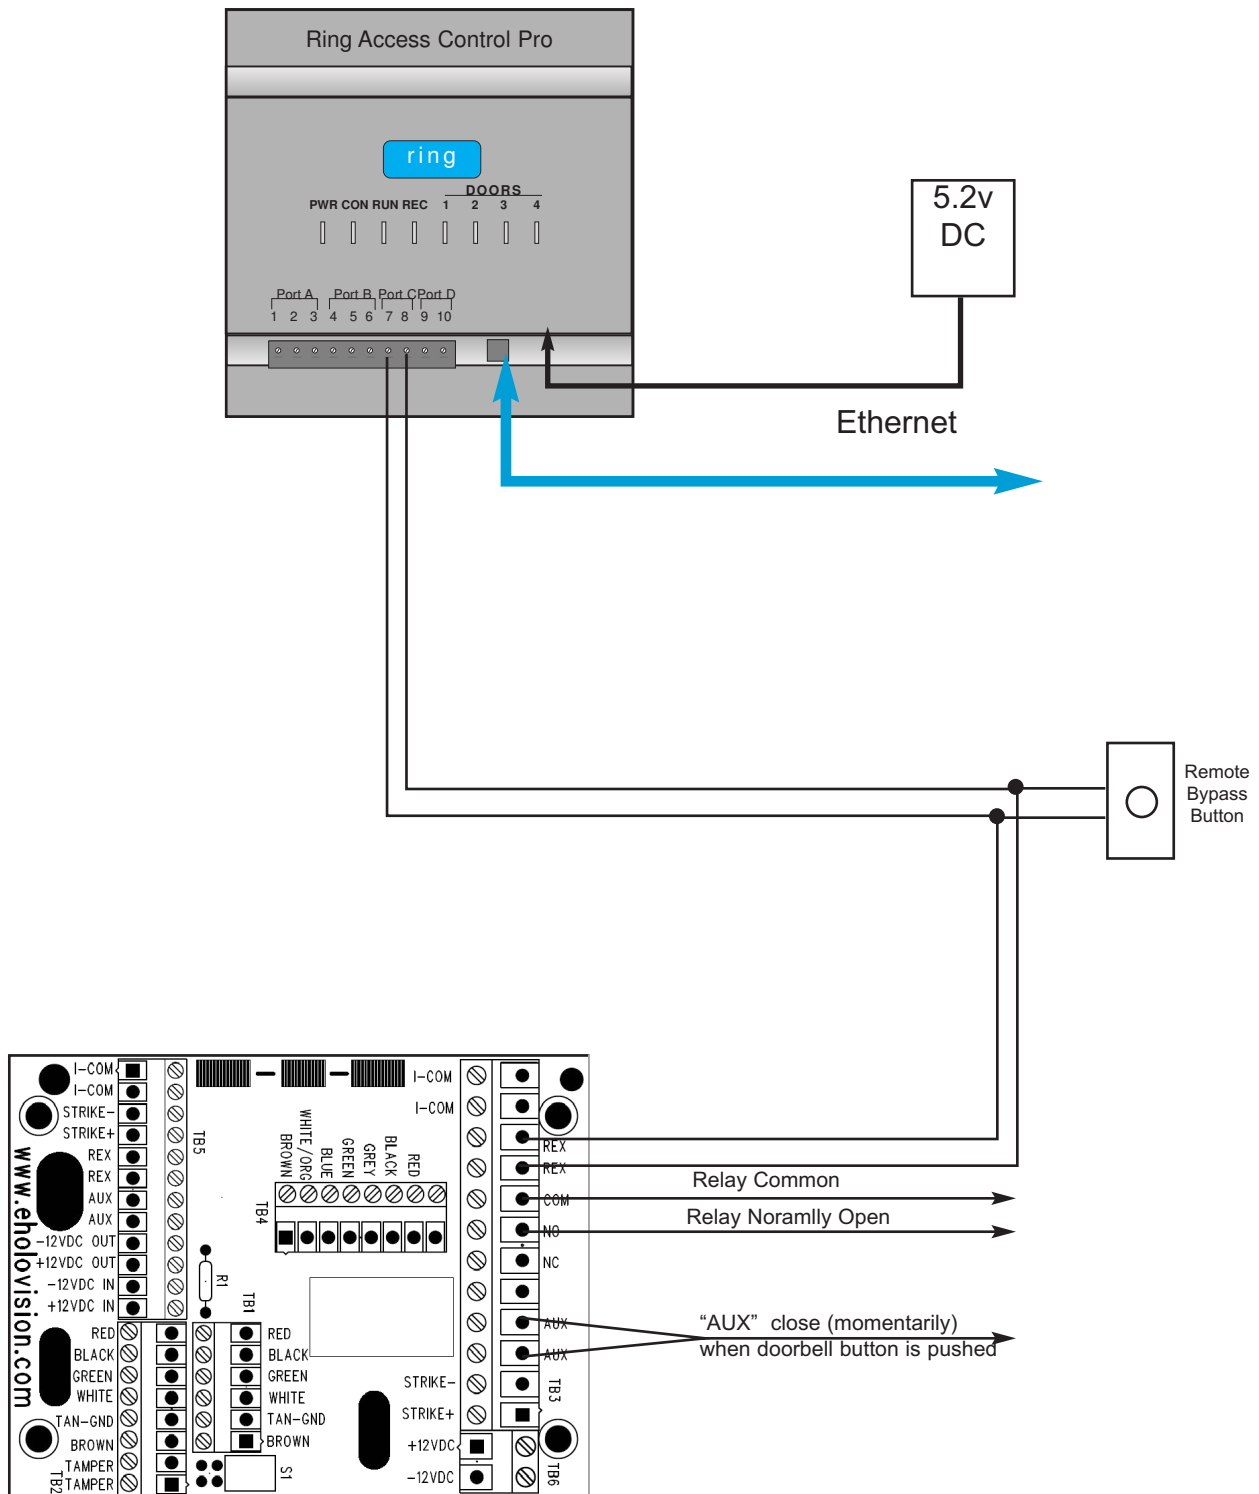

NOTE: MOV (metal oxide varistor) is the small red component which is included. Its purpose is to absorb "inductive kick back" which can be created when power is removed from the strike.
 Loop is required from DC positive to contact common for DC voltage to strike.

Programming the Keypad

Testing the Keypad

STEP	ACTION
1	Apply 12 VDC power to red and black wires
2	Press 7890#123456*
3	LED's will alternate Green, Yellow and Red followed by 3 beeps
4	Test default Master Code- 1234*

Set New Master Code

STEP	ACTION
1	The default Master Code is 1234*. This can be changed to a unique code 3 - 8 digits long
2	Enter Program Mode- 99 # 1234 *
3	Enter 1 # new Master Code * new Master Code *
4	When finished press * to exit Program Mode

Program User Codes

STEP	ACTION
1	Enter Program Mode- 99 # Master Code *
2	Enter Standard User Location (Standard User Locations start at 3 and go up to 500) followed by # New Code * New Code *
3	Example 99 # Master Code * User Location # New Code * New Code *
4	When finished press * to exit Program Mode

Delete User Codes

STEP	ACTION
1	Enter Program Mode- 99 # Master Code *
2	Enter 56 # followed by 1 (Disable) # User Location # * *
3	Example 99 # Master Code * 56 # 1 # User Location # * *
4	When finished press * to exit Program Mode

DEFAULT USER CODE & MASTER CODE IS "1234*"

Programming the Keypad

Set Relay Duration Time

STEP	ACTION
1	Enter Program Mode- 99 # Master Code *
2	Enter 11 # followed by desired time (1 to 255 seconds) # 0 # * *
3	Example 99 # Master Code * 11 # 20 # 0 # * *
4	When finished press * to exit Program Mode

Program a Latching Code

STEP	ACTION
1	Enter Program Mode- 99 # Master Code *
2	Enter 60 # 0 # User Location # Code * Code *
3	Example 99 # Master Code * 60 # 0 # User Location # Code * Code *
4	When finished press * to exit Program Mode
5	To activate Latching enter latching Code. To Unlatch enter Code Again

IEI S12 Default Keypad

STEP	ACTION
1	Power down keypad and combine the brown, white and yellow/white wires then power the keypad up
2	Enter 46 #
3	Press "0" five times followed by #
4	Press "0" five times followed by #
5	Press **** to exit programming. Power down, disconnect brown, white and yellow/white. Power up and test with 1234*

