



Step One:

Remove 4 Screws That Keep Ring Module Mounted To Holovision Faceplate Then Press Rubber Button In Upper Right Corner Of Ring Module To Put Ring Into Setup Mode (Ring Around Button Should Begin To Spin White And Module Should Announce It Is In Setup Mode)

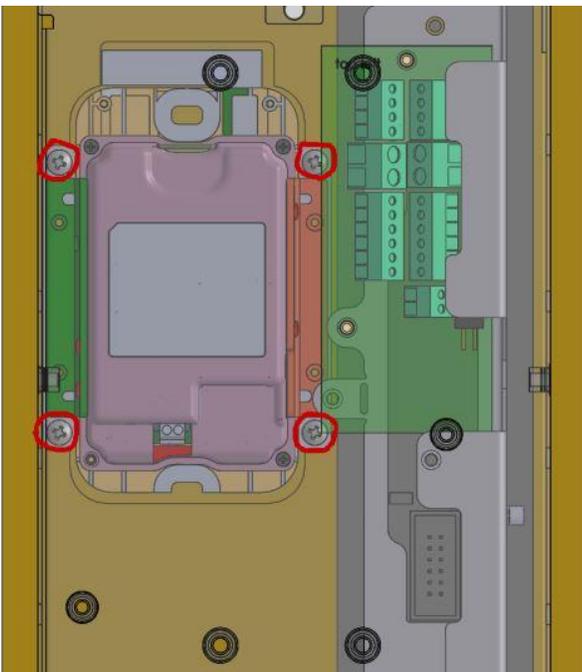


Step Two:

Open Ring App And Select
Dropdown Menu

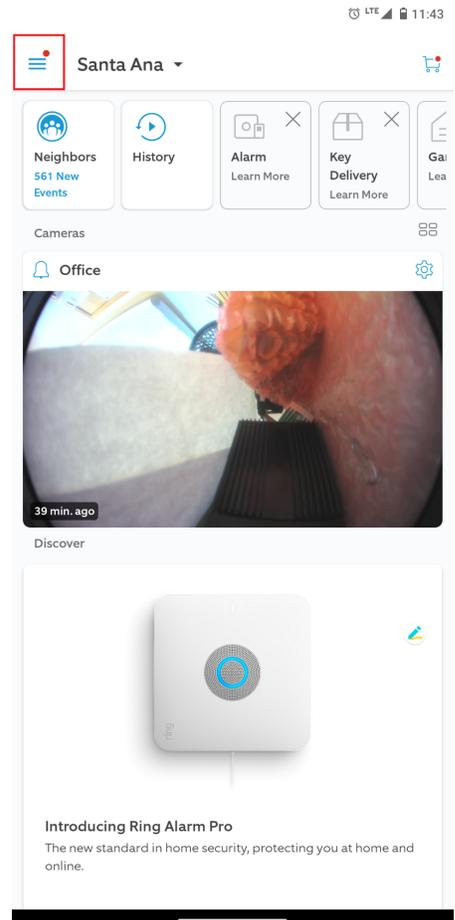


Step Three:


Select Set Up A Device

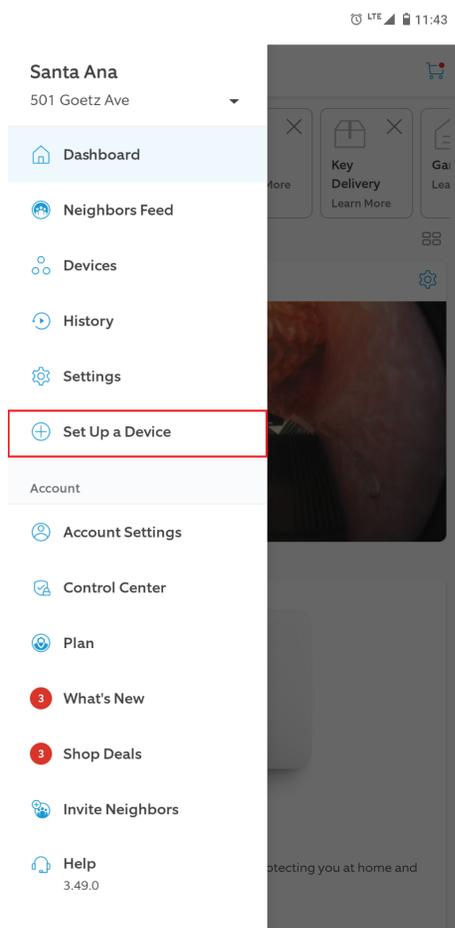

Step Four: Select Doorbells

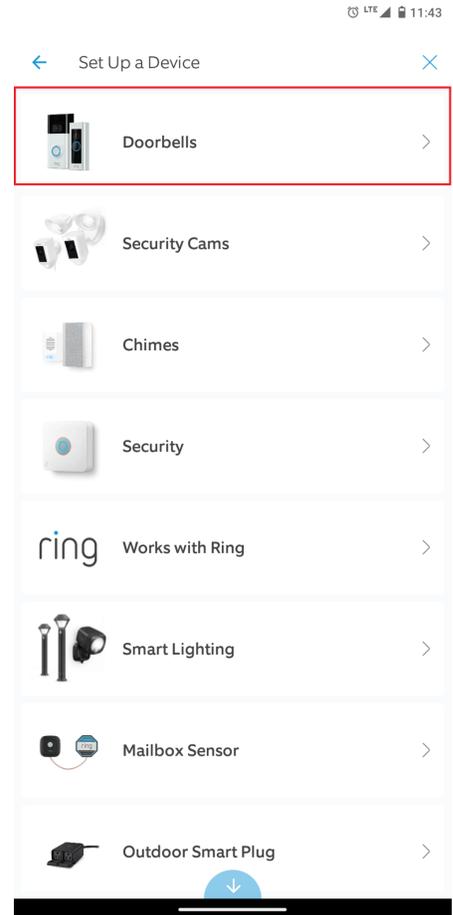


Step Five: Select Set Up Without Scanning

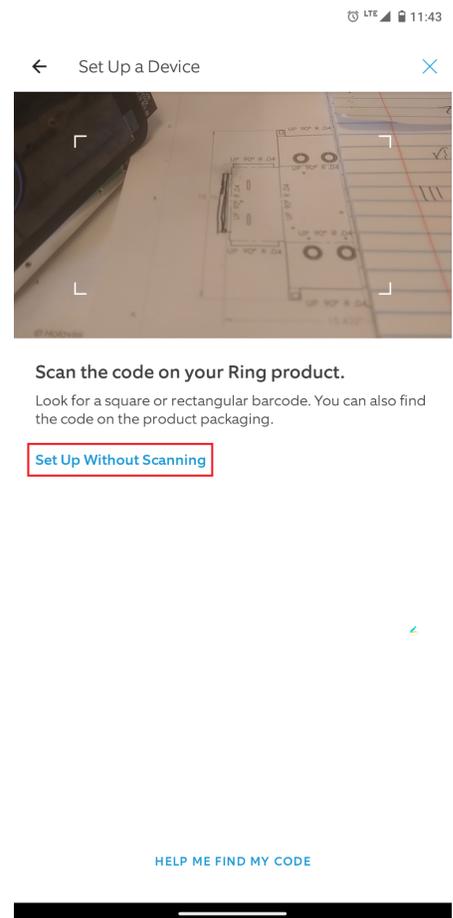


Step Six:

Select Video Doorbell Elite

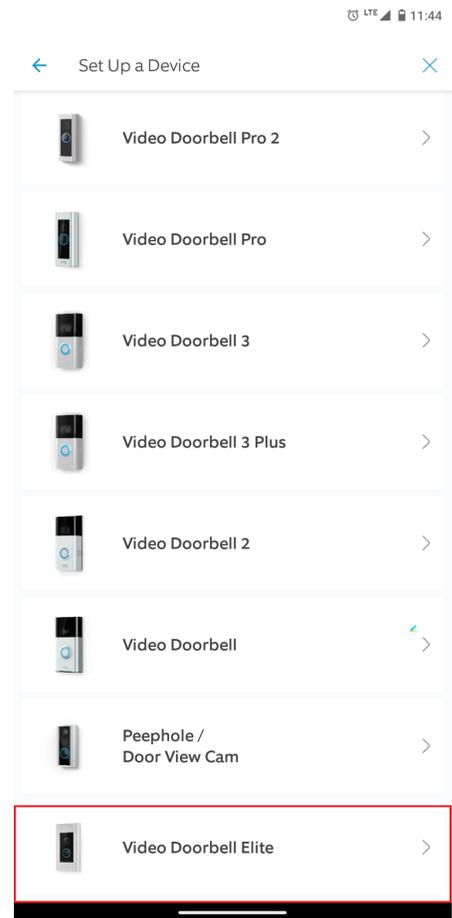


Step Seven:


Select Location Or Create Location For This Ring To Be Registered To

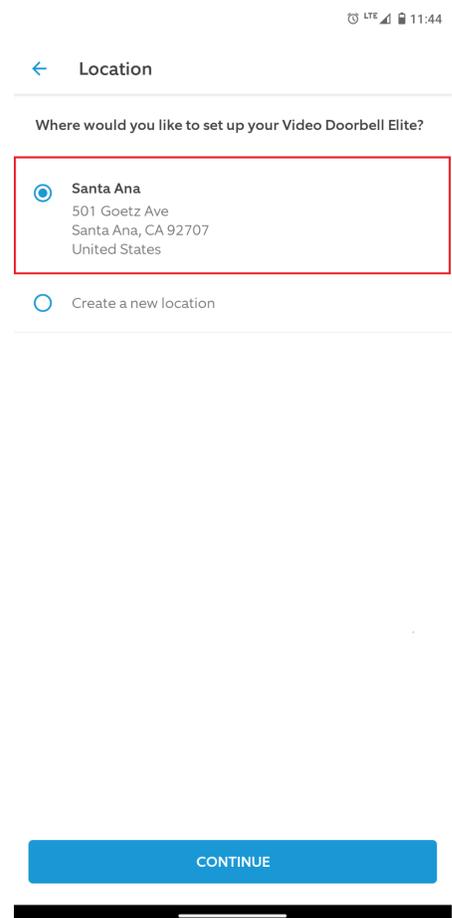

Step Eight: Select Doorbell Name Or Create Custom Name

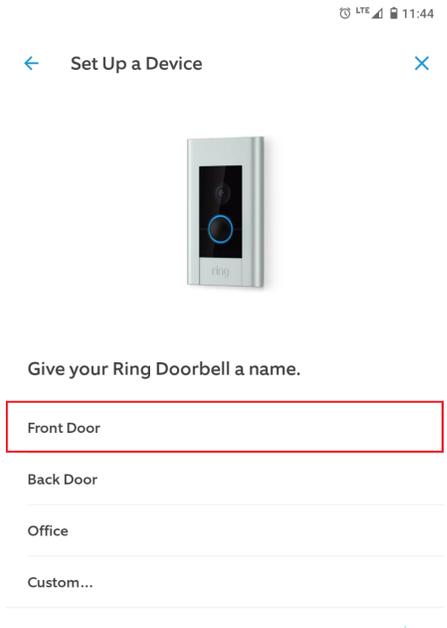

Step Nine: Select It's Been Installed

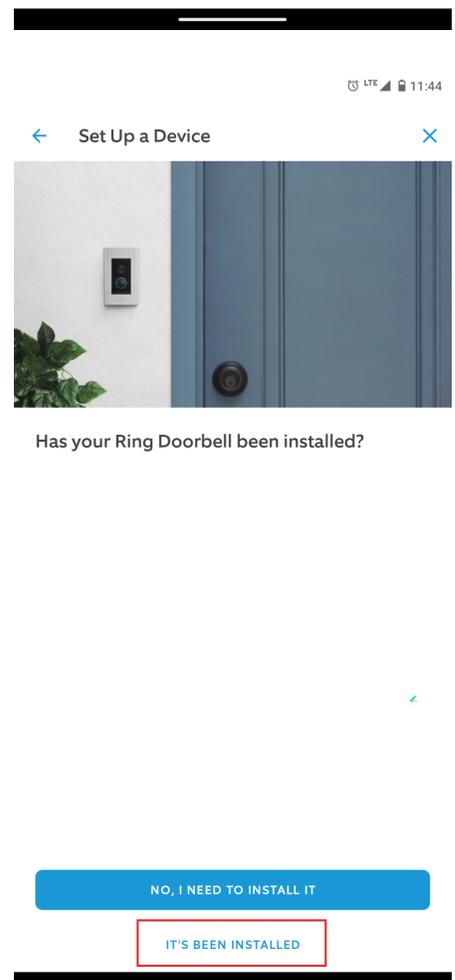



Step Ten:

Ring Only Intercoms Select None

Dual Intercom Select Mechanical

Step Eleven:

Select Ethernet

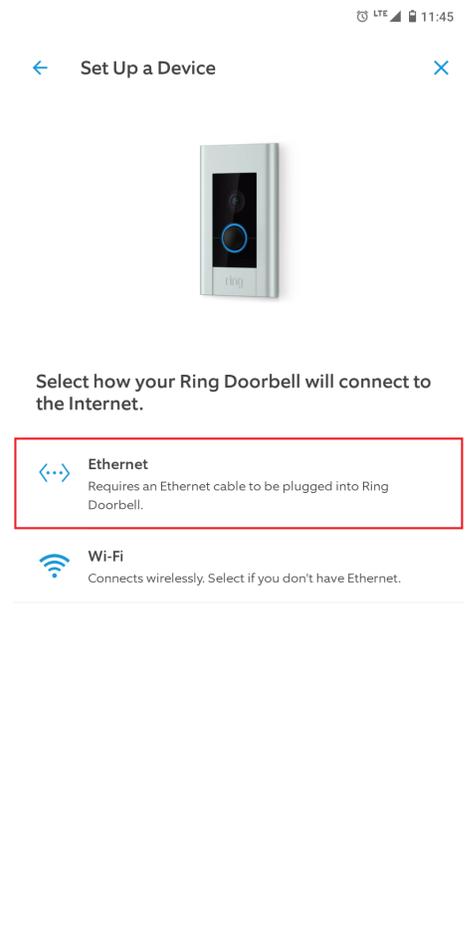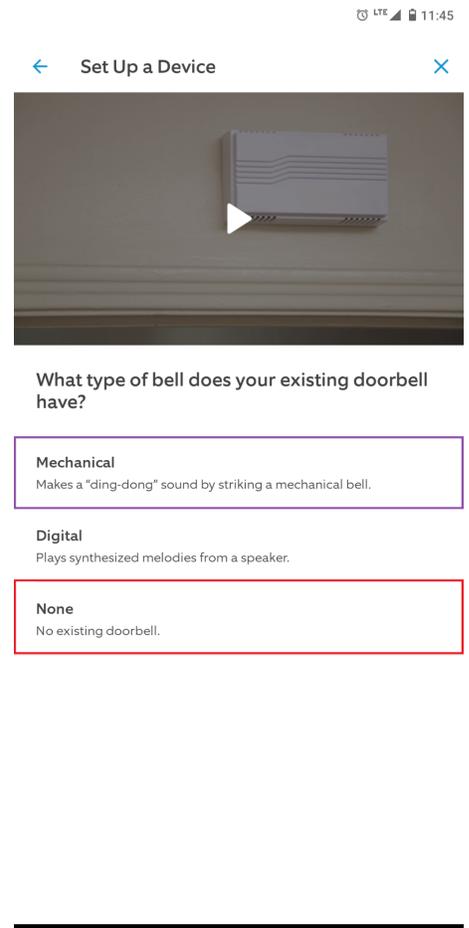


Step Twelve:

Select Light Is Spinning If Ring Module Is In Setup Mode And Light Around The Button Is Spinning


Step Thirteen:

Select Goto Wifi Settings Or Goto Wifi Settings If App Doesn't Forward You Properly

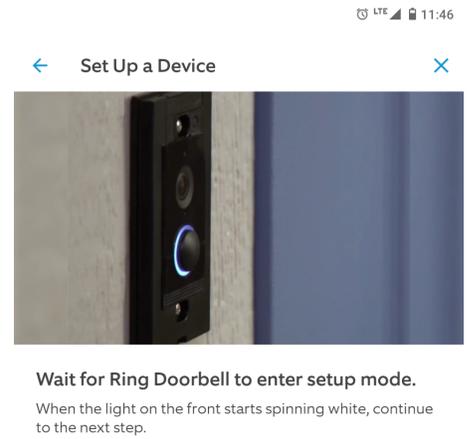

LIGHT IS SPINNING WHITE

NOT SPINNING WHITE

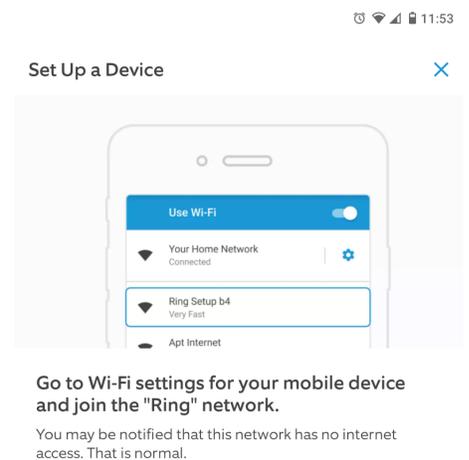

GO TO WI-FI SETTINGS

Step Fourteen:

1. Select "Ring Setup" Wifi

2. After Connected Select Back

3. Then Wait For Setup To Finish Linking To Ring Account

