HOLOVISION

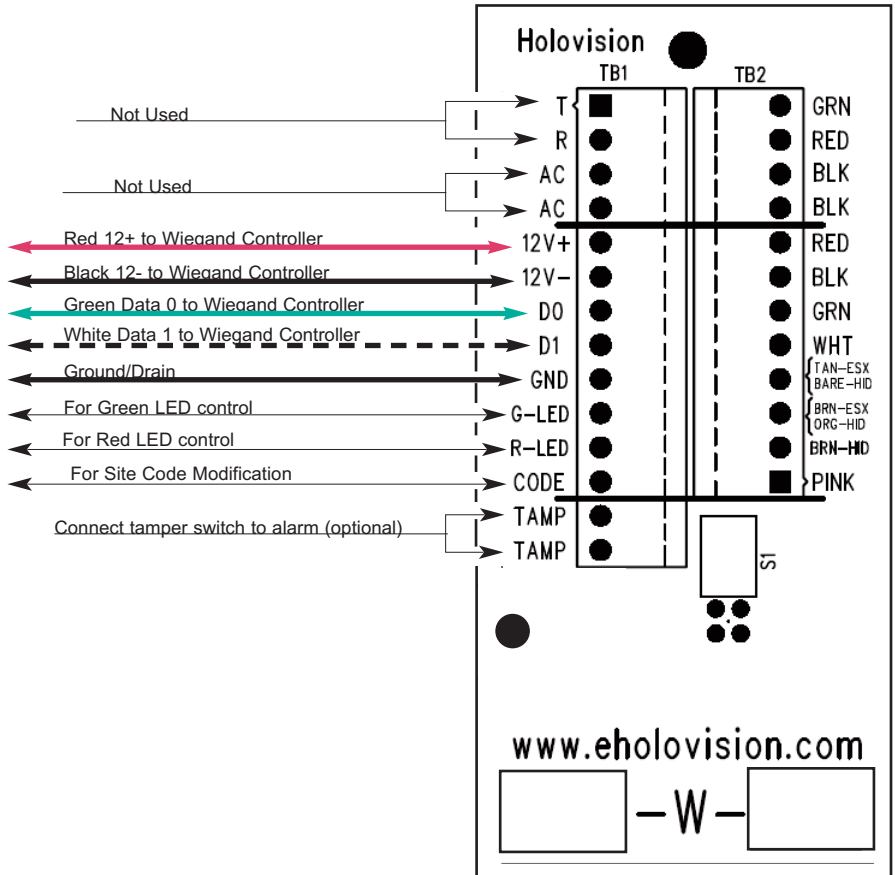## Manual Type 6.4.0.13-RF
RING Elite Intercom with Essex Wiegand Keypad and RING LEO Controller

For Models

Specifications	
Communication RING Elite Pro Intercom	**Access Control** Essex KPT-26TI 26 bit Wiegand Keypad RING LEO Controller

Holovision

	TB1		TB2	
Not Used	→ T	■	●	GRN
	→ R	●	●	RED
Not Used	→ AC	●	●	BLK
	→ AC	●	●	BLK
Red 12+ to Wiegand Controller	12V+	●	●	RED
Black 12- to Wiegand Controller	12V−	●	●	BLK
Green Data 0 to Wiegand Controller	D0	●	●	GRN
White Data 1 to Wiegand Controller	D1	●	●	WHT
Ground/Drain	GND	●	●	TAN−ESX / BARE−HID
For Green LED control	G−LED	●	●	BRN−ESX / ORG−HID
For Red LED control	R−LED	●	●	BRN−HID
For Site Code Modification	CODE	●	■	PINK
Connect tamper switch to alarm (optional)	TAMP	●		
	TAMP	●		

S1

www.eholovision.com

—W—

400 Series "W" Junction Board

HOLOVISION

RING LEO Controller

Ring Access Control Pro

ring

DOORS

PWR CON RUN REC 1   2   3   4

Port A   Port B Port C Port D
1   2   3   4   5   6   7   8   9   10

5.2v
DC

Ethernet

To Wiegand Controller GND/-

To Wiegand Controller D0

To Wiegand Controller D1

To Wiegand Controller Request to Exit

To Wiegand Controller Request to Exit

NO/COM Relay Output
(must be programmed for NO through Ring)
To Wiegand Controller Request to Exit
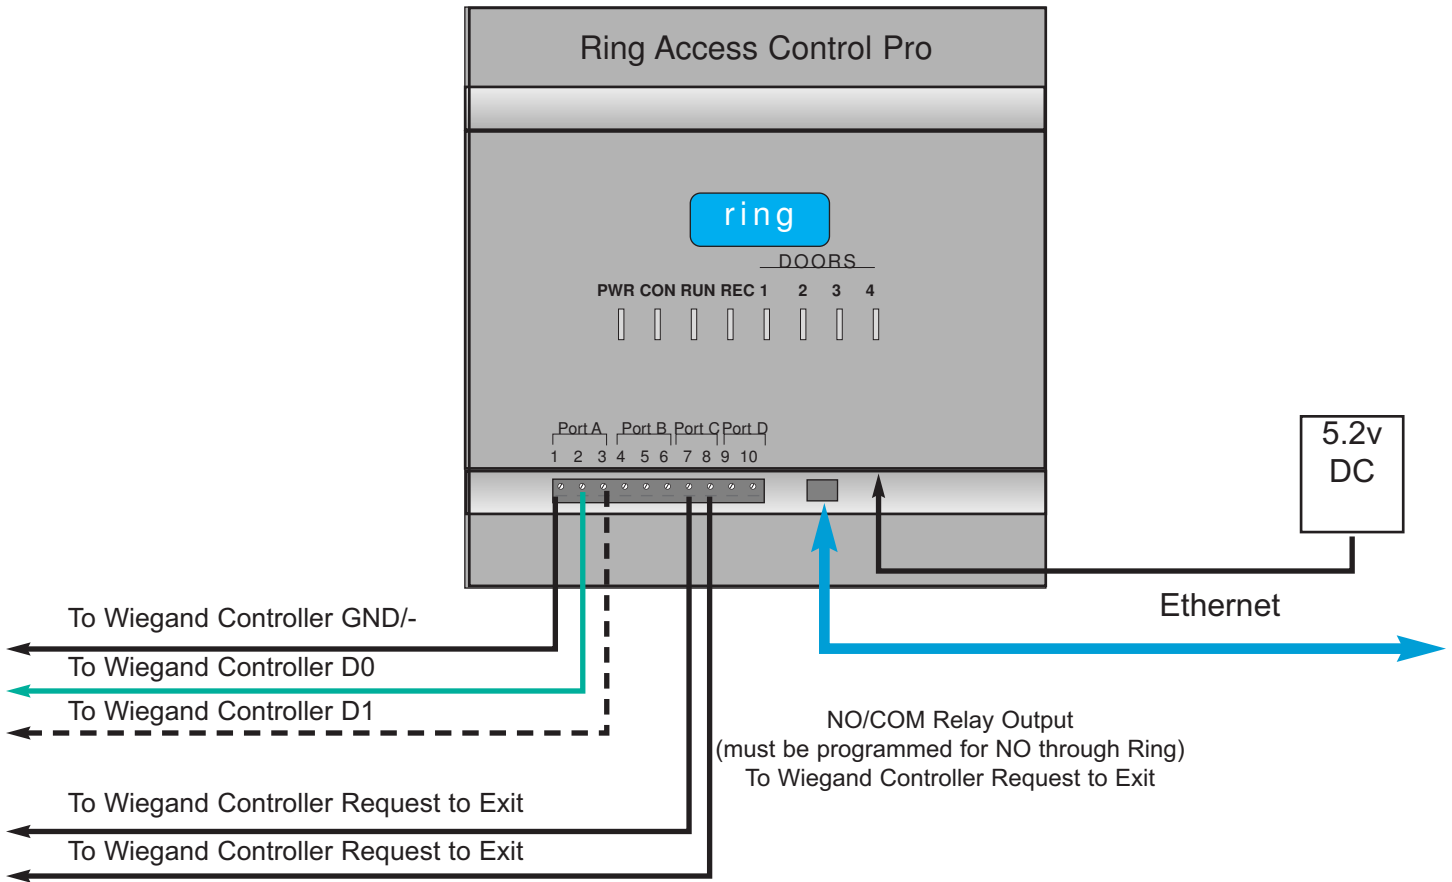
To setup your RING LEO controller please contact RING at
ring-acp-device-support@amazon.com
1(888)255-1041