


Prewire for Model 426


For the following combinations: **426-S12-VIO**

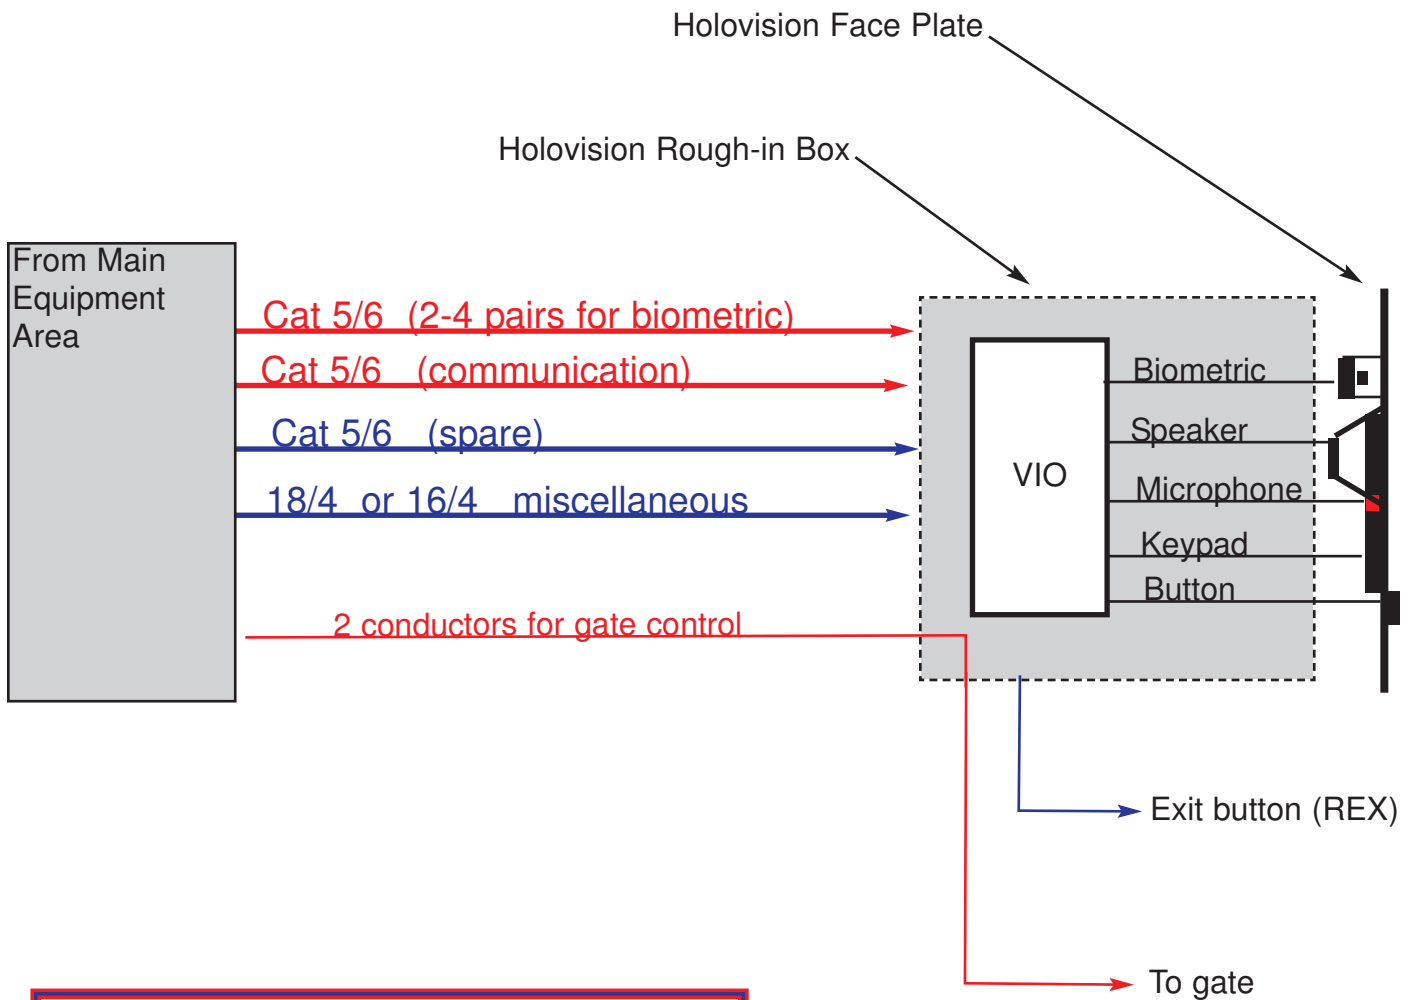

NOTE:
Wires shown in red are the minimum required
Wires shown in blue are recommended

Prewire for Model 426

For the following combinations: **426-W-VIO**

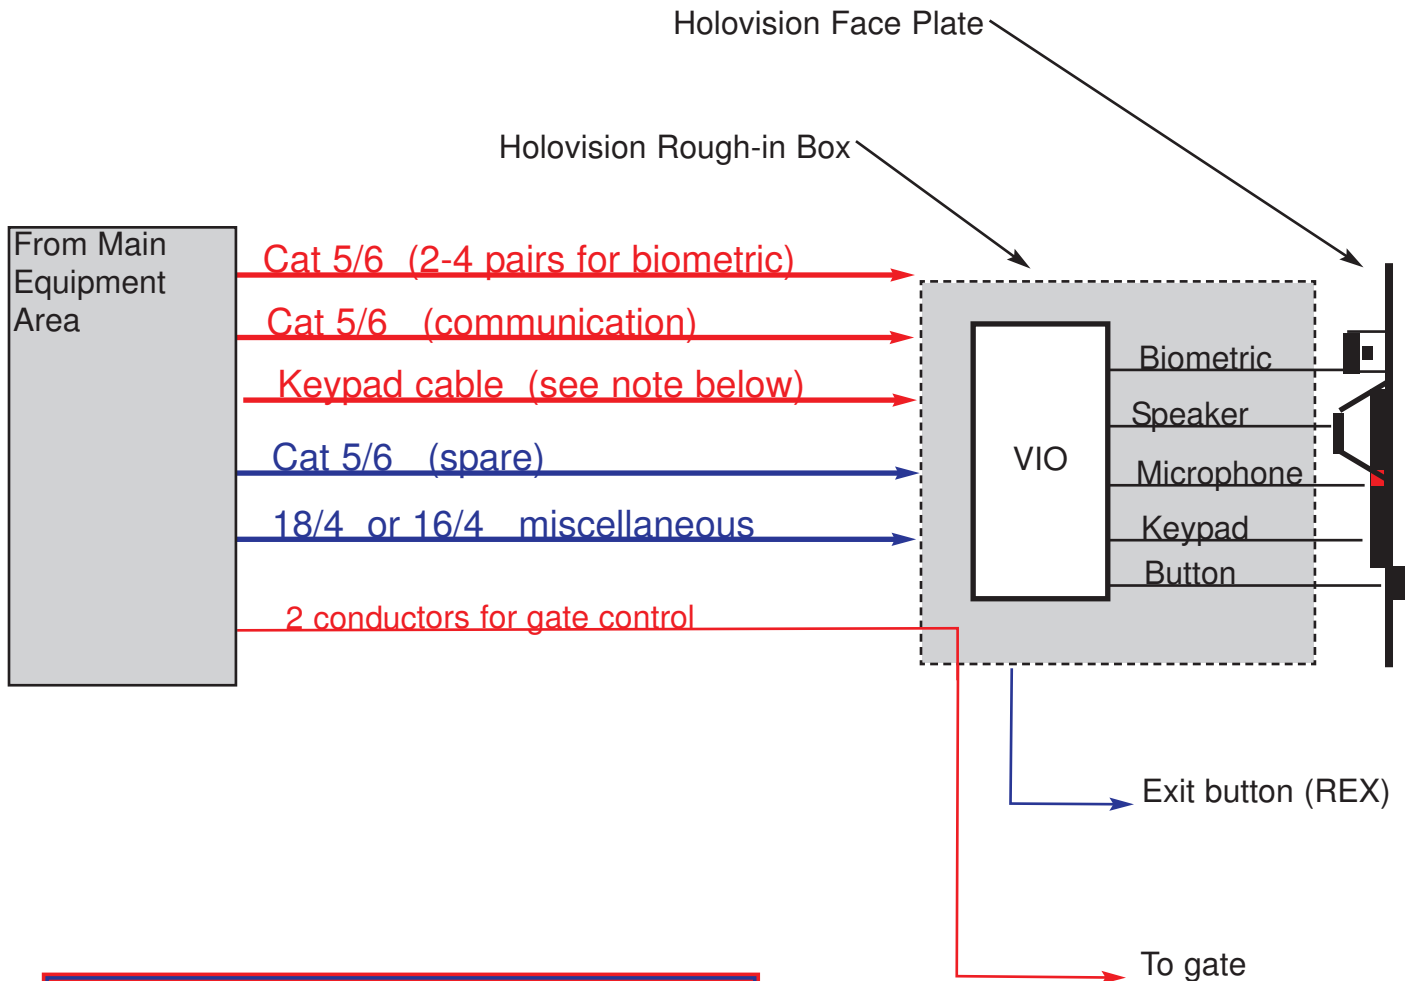


NOTE:
Wires shown in red are the minimum required
Wires shown in blue are recommended

Wiegand Keypad:
Cable Distance
Wiegand or Clock-and-Data interface: 500 feet
Recommended cable
Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent


Prewire for Model 426

For the following combinations: 426-S12-VIK

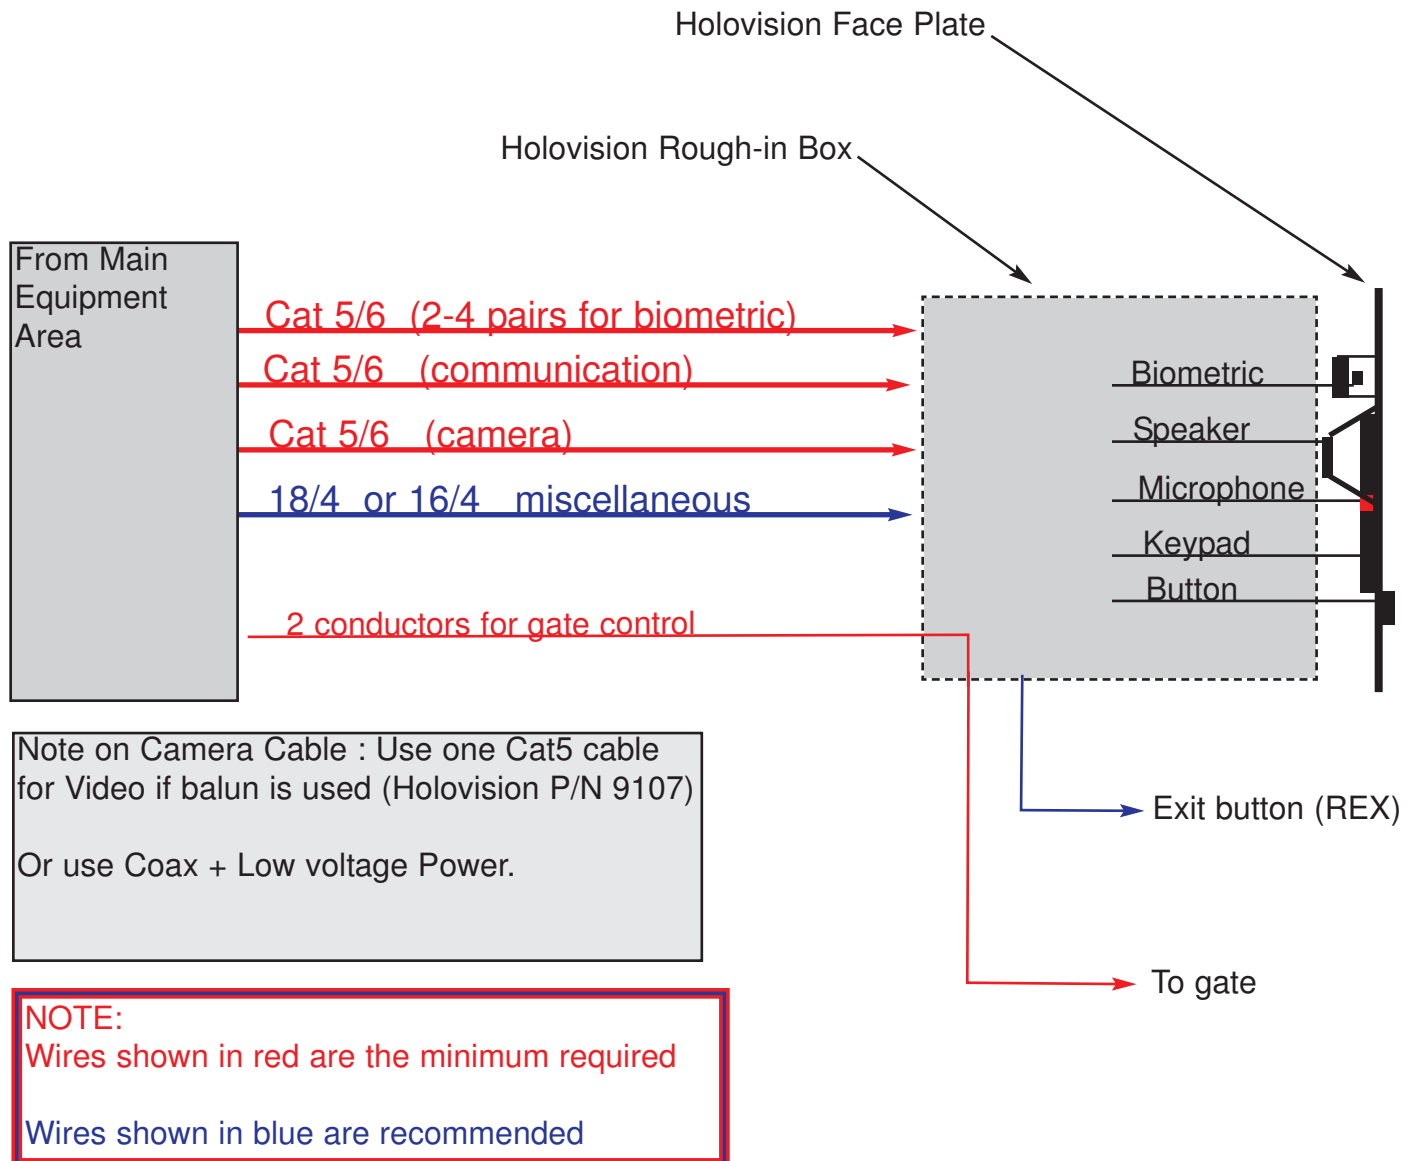

Prewire for Model 426

For the following combinations: **6XX-W-VIK** and **7XX-W-VIK**

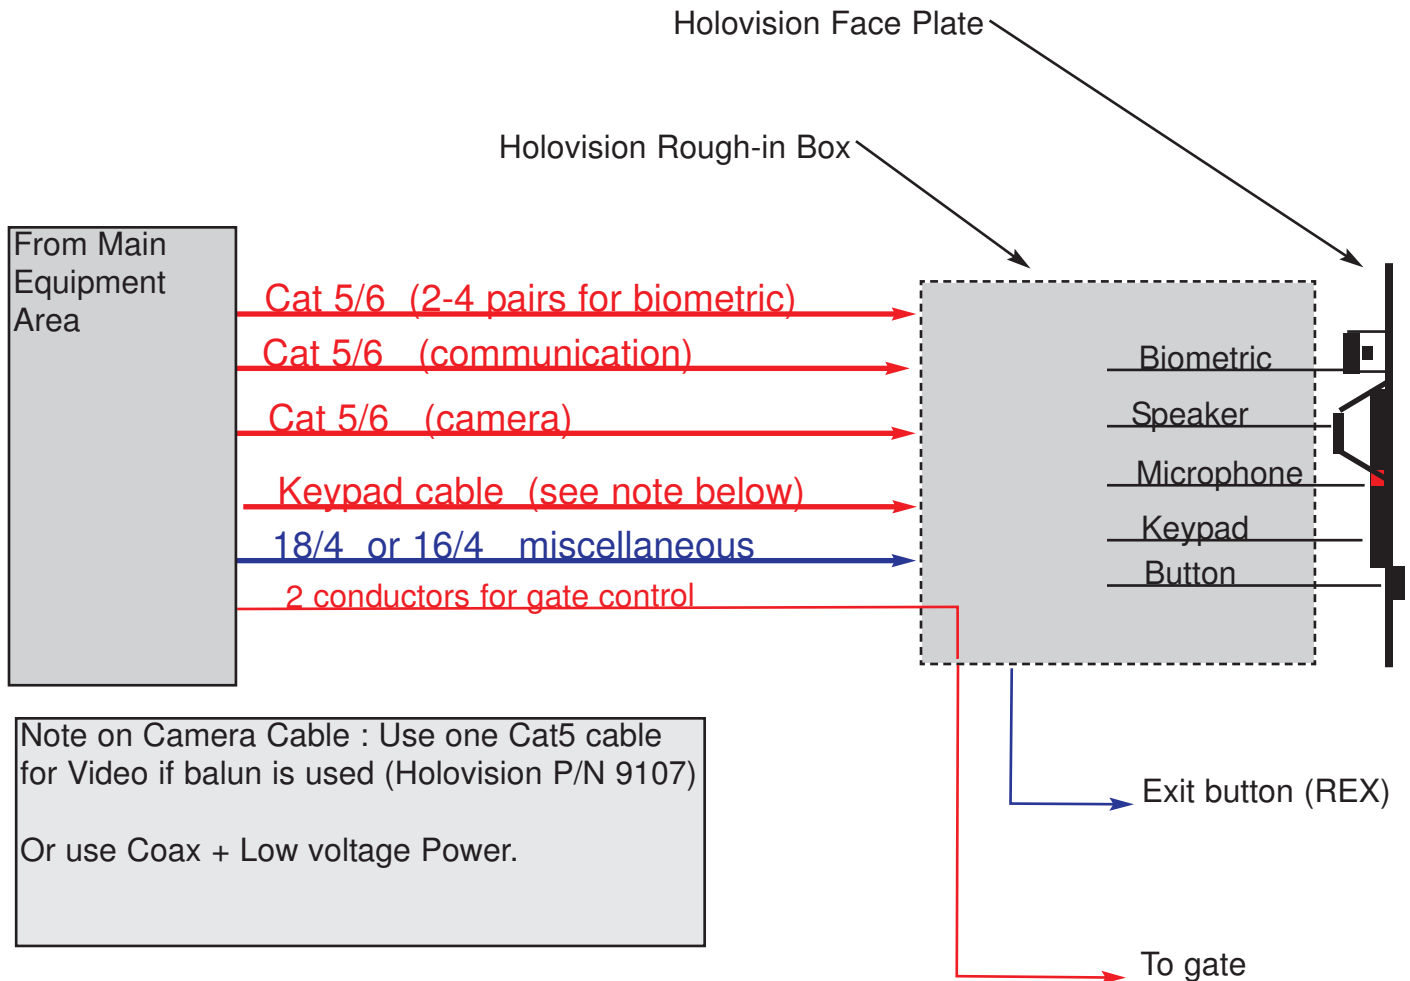

Note on Camera Cable : Use one Cat5 cable for Video if balun is used (Holovision P/N 9107)

Or use Coax + Low voltage Power.

NOTE:
Wires shown in red are the minimum required

Wires shown in blue are optional

Wiegand Keypad:

Cable Distance

Wiegand or Clock-and-Data interface: 500 feet

Recommended cable

Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent

Door Station Rough-in

Model 426



62"



NOTE: All dimensions given are relative to "finished" surface, not rough grade.