


Prewire for Models 601 and 701


For the following combinations: 601-S12-VIO and 701-S12-VIO

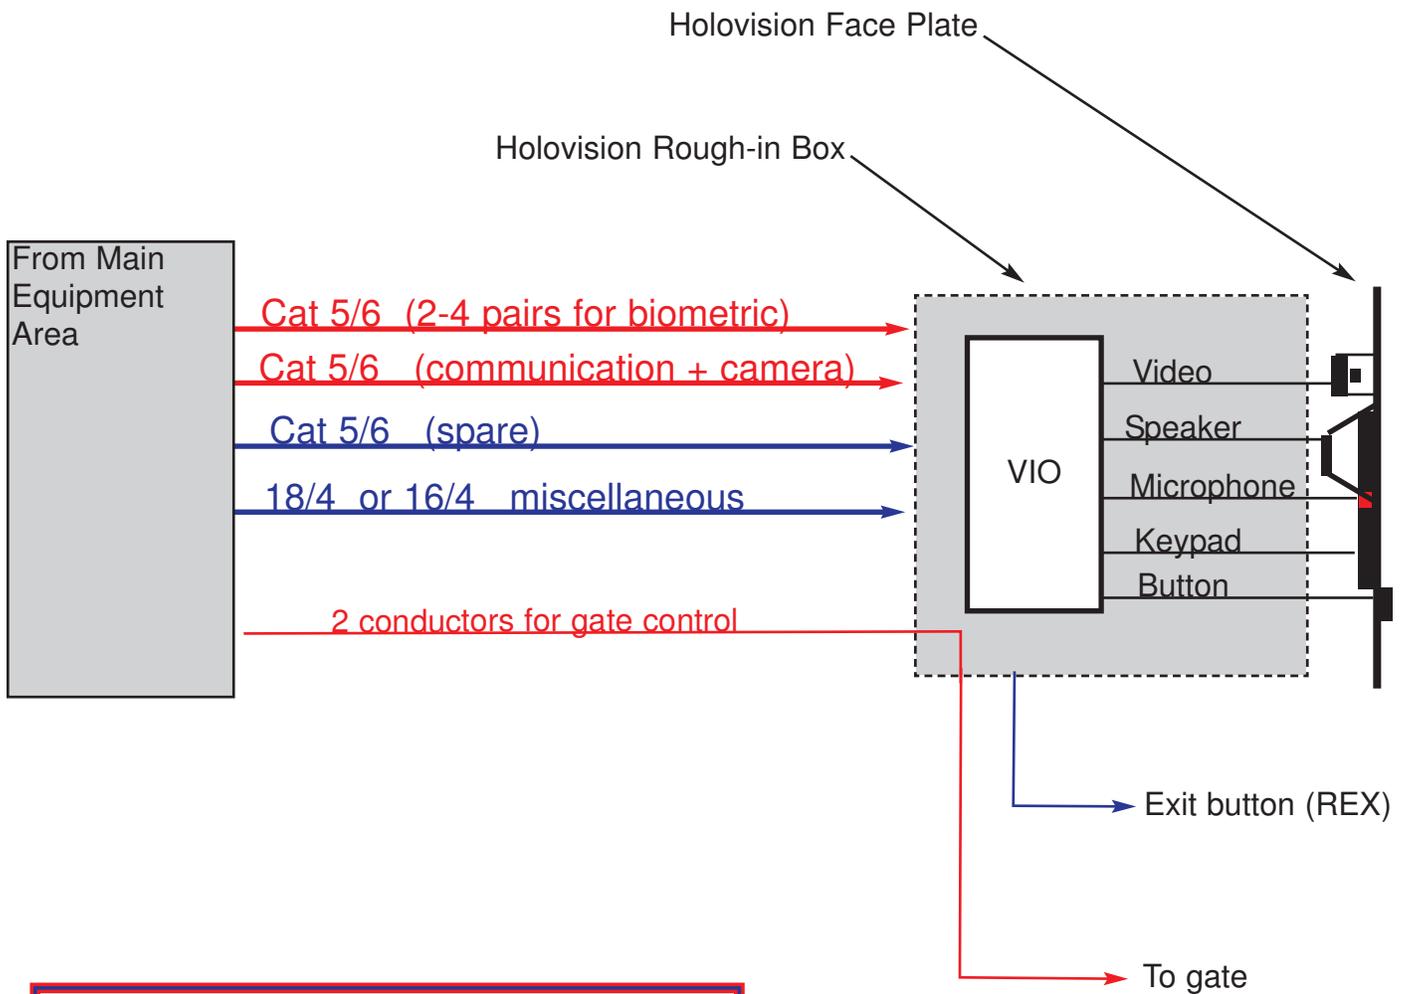

NOTE:
Wires shown in red are the minimum required
Wires shown in blue are recommended

Prewire for Models 601 and 701

For the following combinations: **6XX-W-VIO** and **7XX-W-VIO**

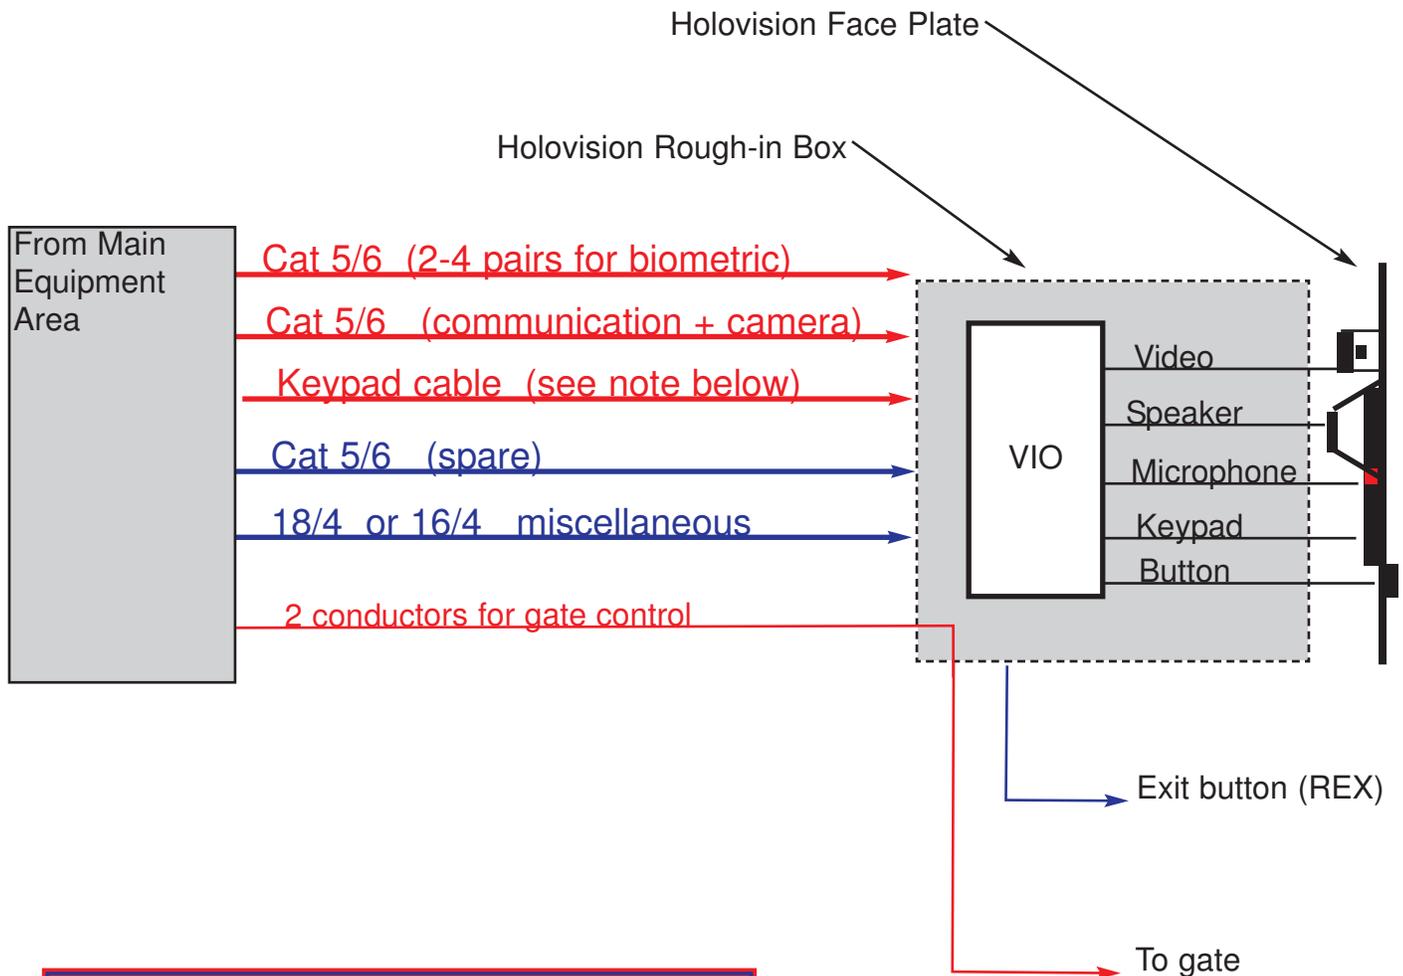

NOTE:
Wires shown in red are the minimum required
Wires shown in blue are recommended

Wiegand Keypads:

Cable Distance

Wiegand or Clock-and-Data interface: 500 feet


Recommended cable

Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent

NOTE: Cat 5 / 6 cable for Wiegand keypad is NOT Recommended


Prewire for Models 601 and 701

For the following combinations: 601-S12-VIK and 701-S12-VIK

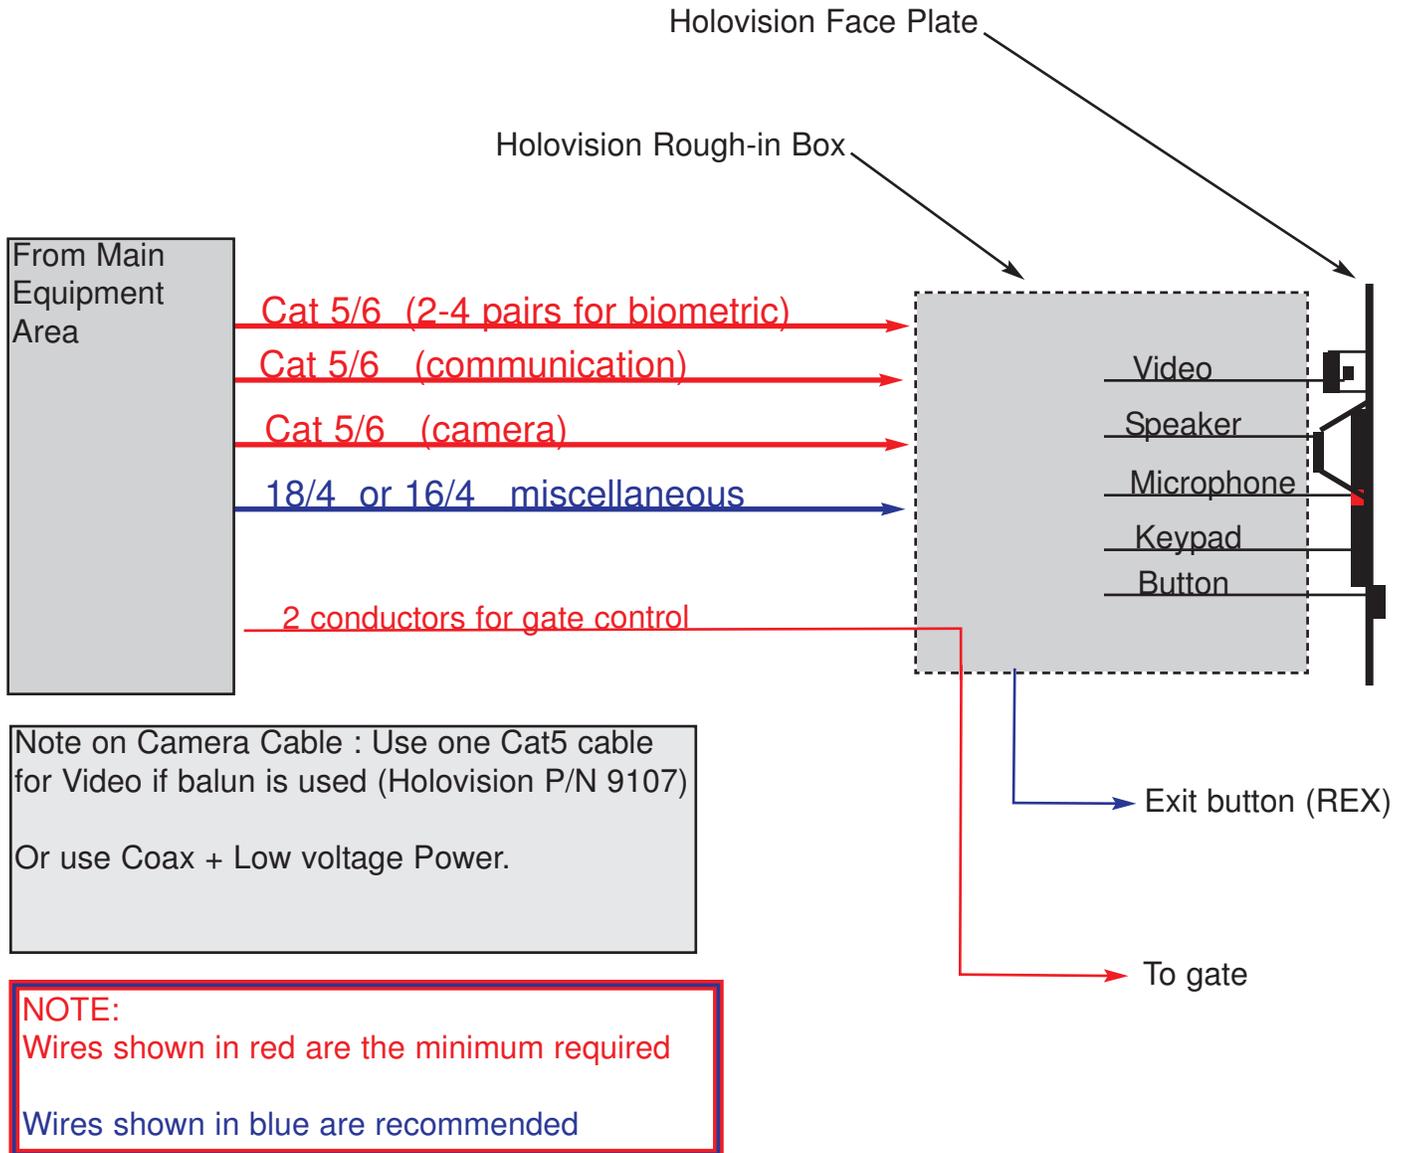

Prewire for Models 601 and 701

For the following combinations: **6XX-W-VIK** and **7XX-W-VIK**

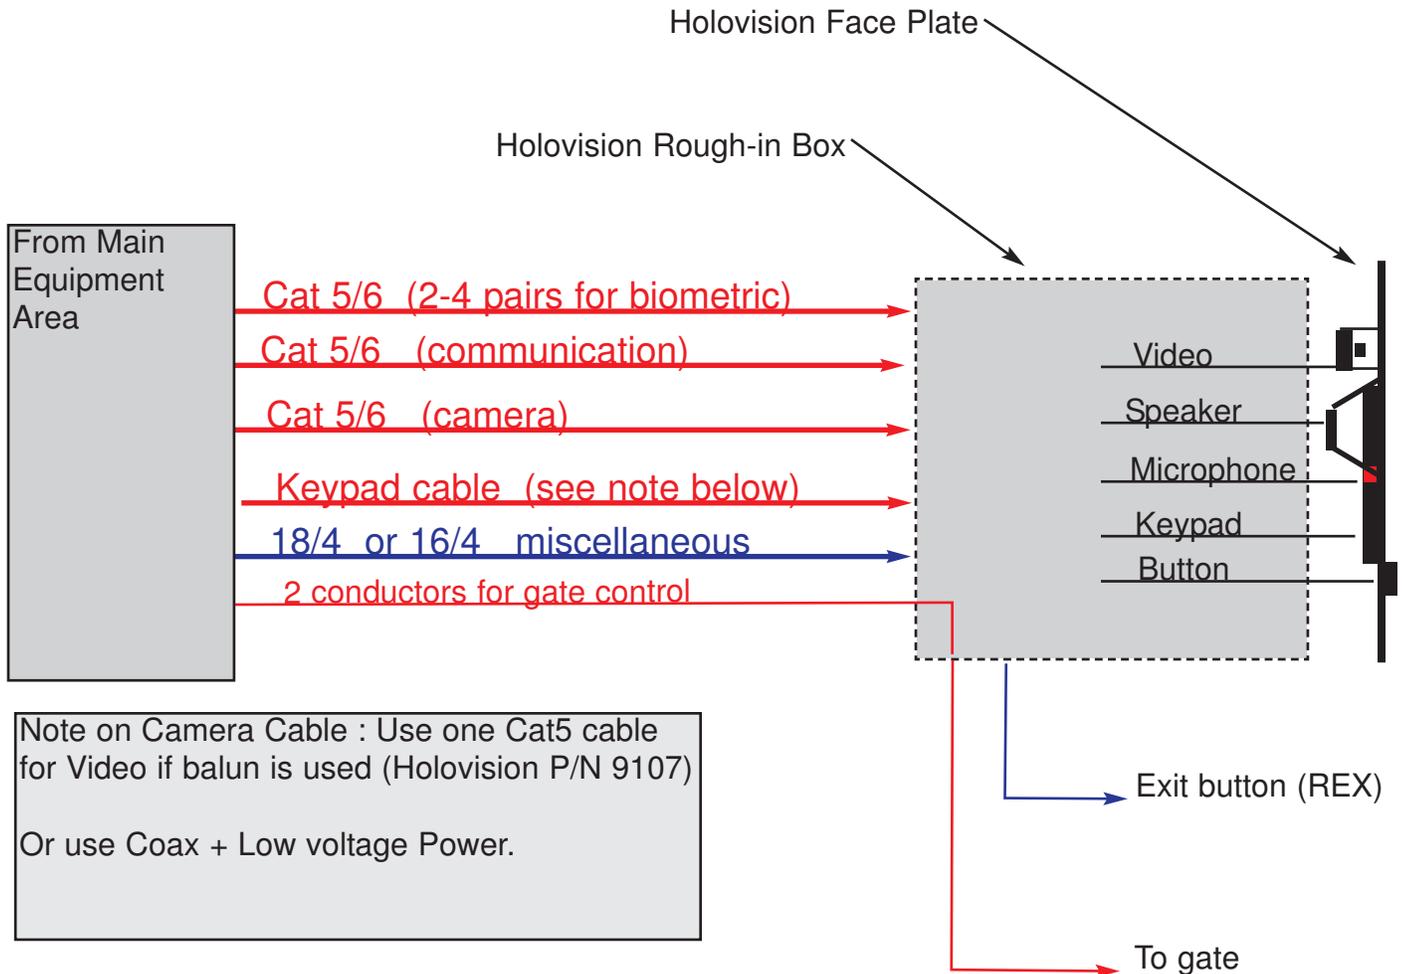

Note on Camera Cable : Use one Cat5 cable for Video if balun is used (Holovision P/N 9107)
Or use Coax + Low voltage Power.

NOTE:
Wires shown in red are the minimum required
Wires shown in blue are recommended

Wiegand Keypads:
Cable Distance
Wiegand or Clock-and-Data interface: 500 feet
Recommended cable
Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent
NOTE: Cat 5 / 6 cable for Wiegand keypad is NOT Recommended

Door Station Rough-in

Model 601, 701





58"



NOTE: All dimensions given are relative to "finished" surface, not rough grade.



Installation Details - 300 and 600 Series

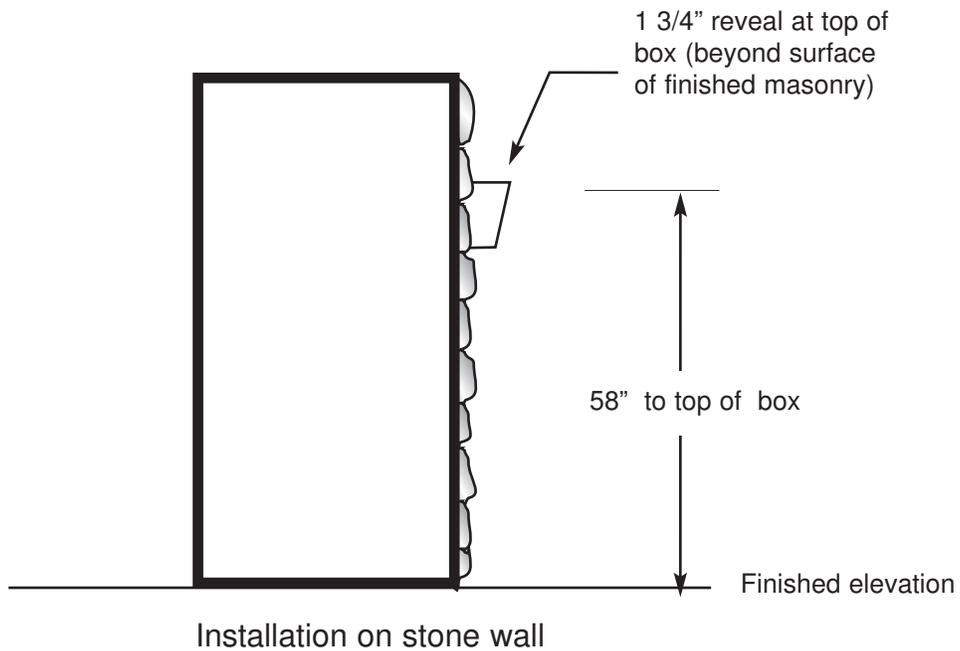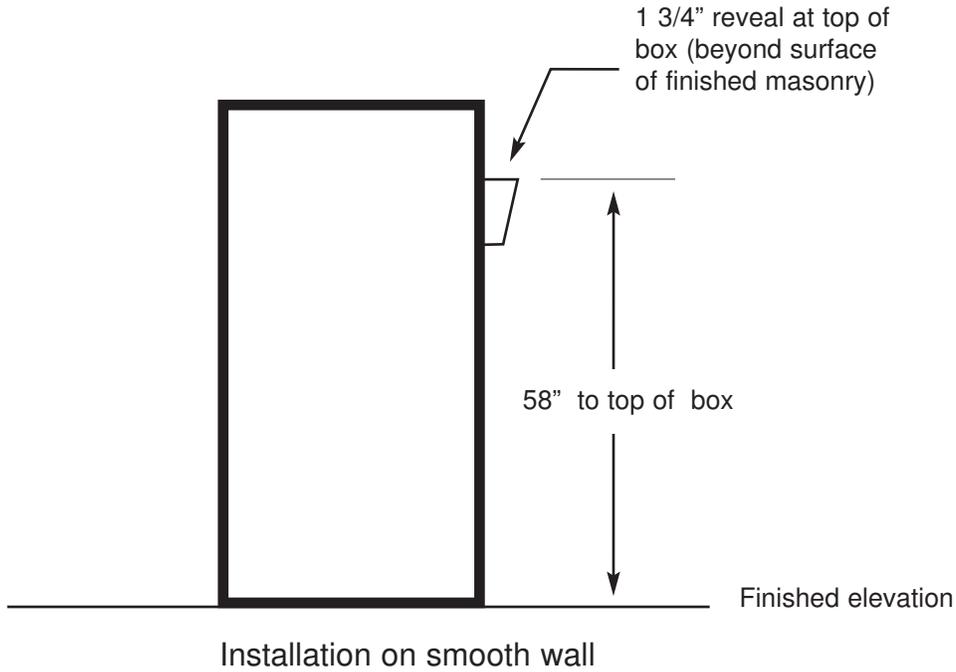

Installation Details - 2 Piece Gooseneck

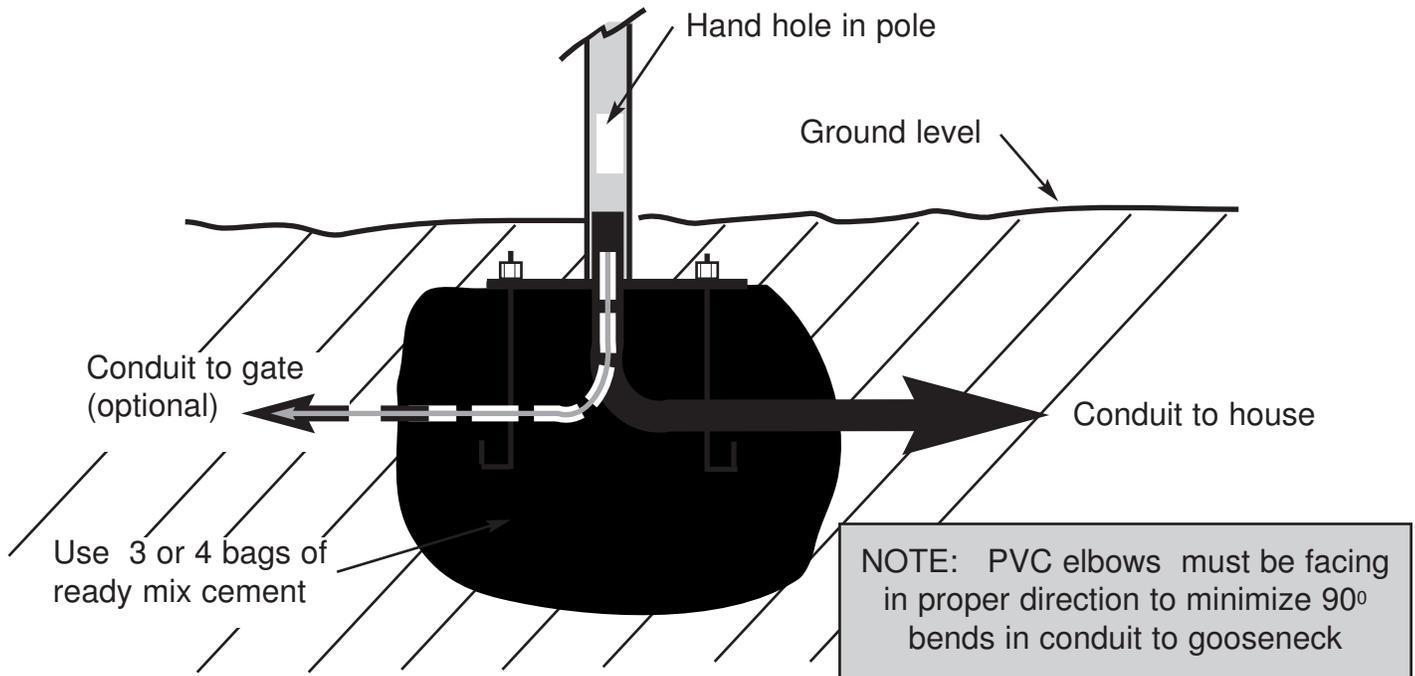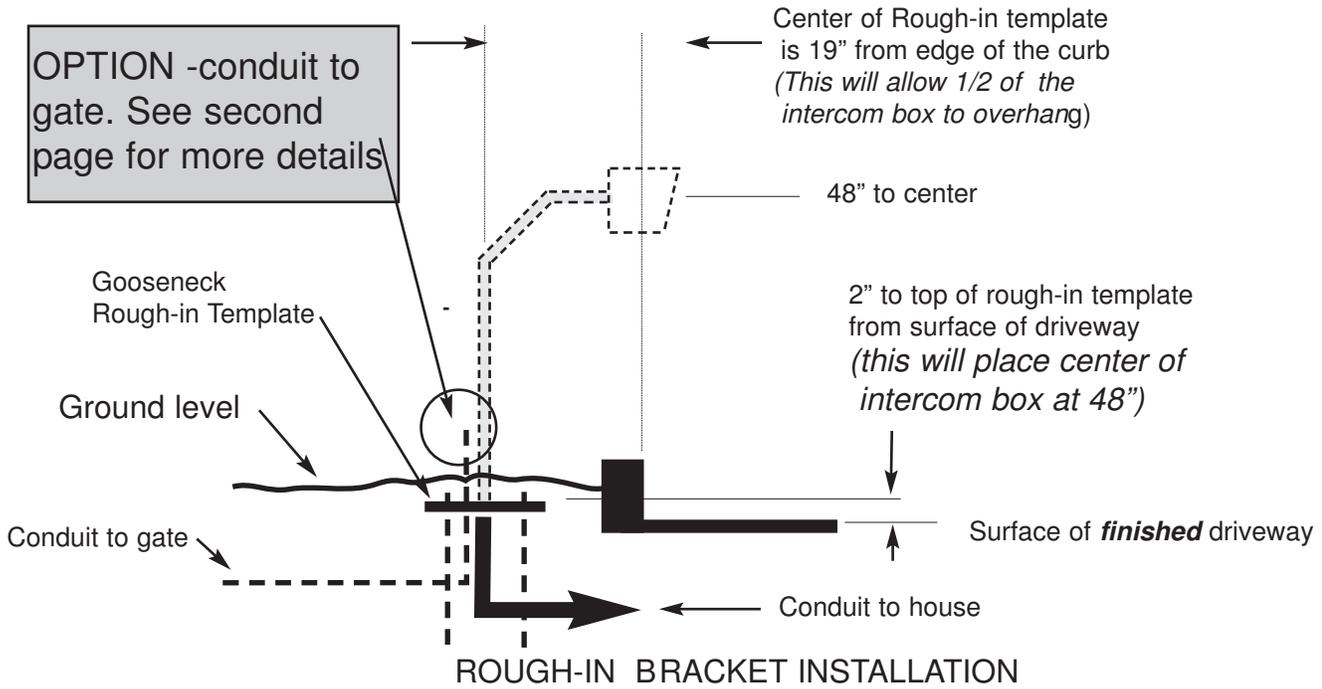

DETAIL OF ATTACHMENT OF POLE ONTO BASE

Installation Details - 2 Piece Gooseneck

Optional application with 2 conduits

