


# Prewire for 600, 700, 800, and 900 Series

For Models 600, 605, 607, 608, 700, 705, 707, 708, 800, 805, 900

For the following combinations: 6XX-S12-VIO, 7XX-S12-VIO, 8XX-S12-VIO and 9XX-S12-VIO

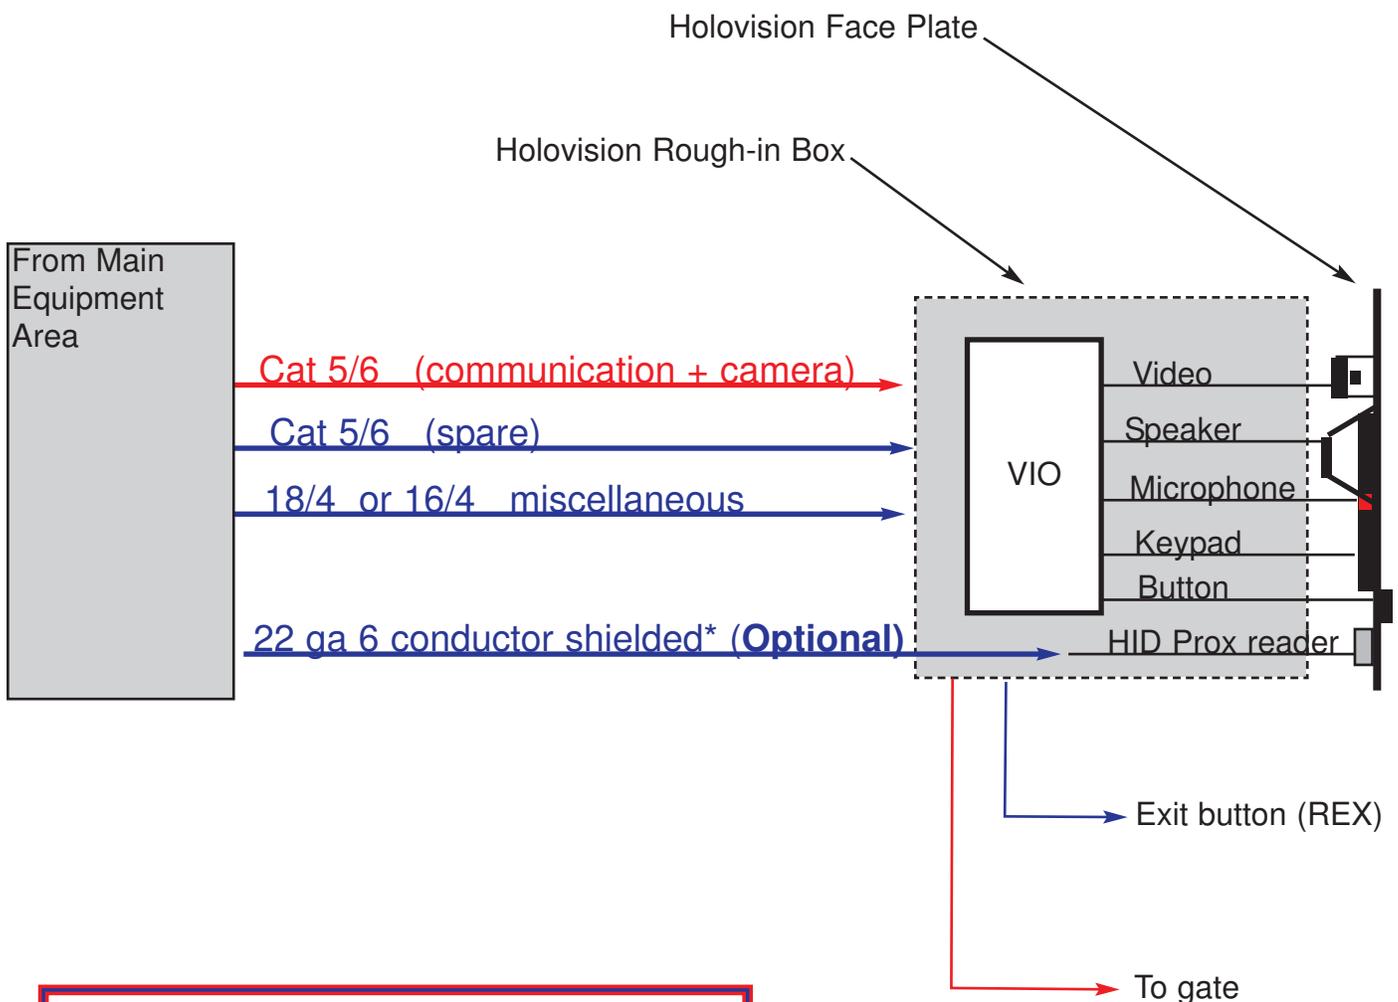

**NOTE:**

Wires shown in red are the minimum required

Wires shown in blue are recommended

**Wiegand Prox Reader: (optional)**

**Cable Distance**

Wiegand or Clock-and-Data interface: 500 feet


**Recommended cable**

Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent

# Prewire for 600, 700, 800, and 900 Series

For Models 600, 605, 607, 608, 700, 705, 707, 708, 800, 805, 900

For the following combinations: 6XX-W-VIO, 7XX-W-VIO, 8XX-W-VIO and 9XX-W-VIO

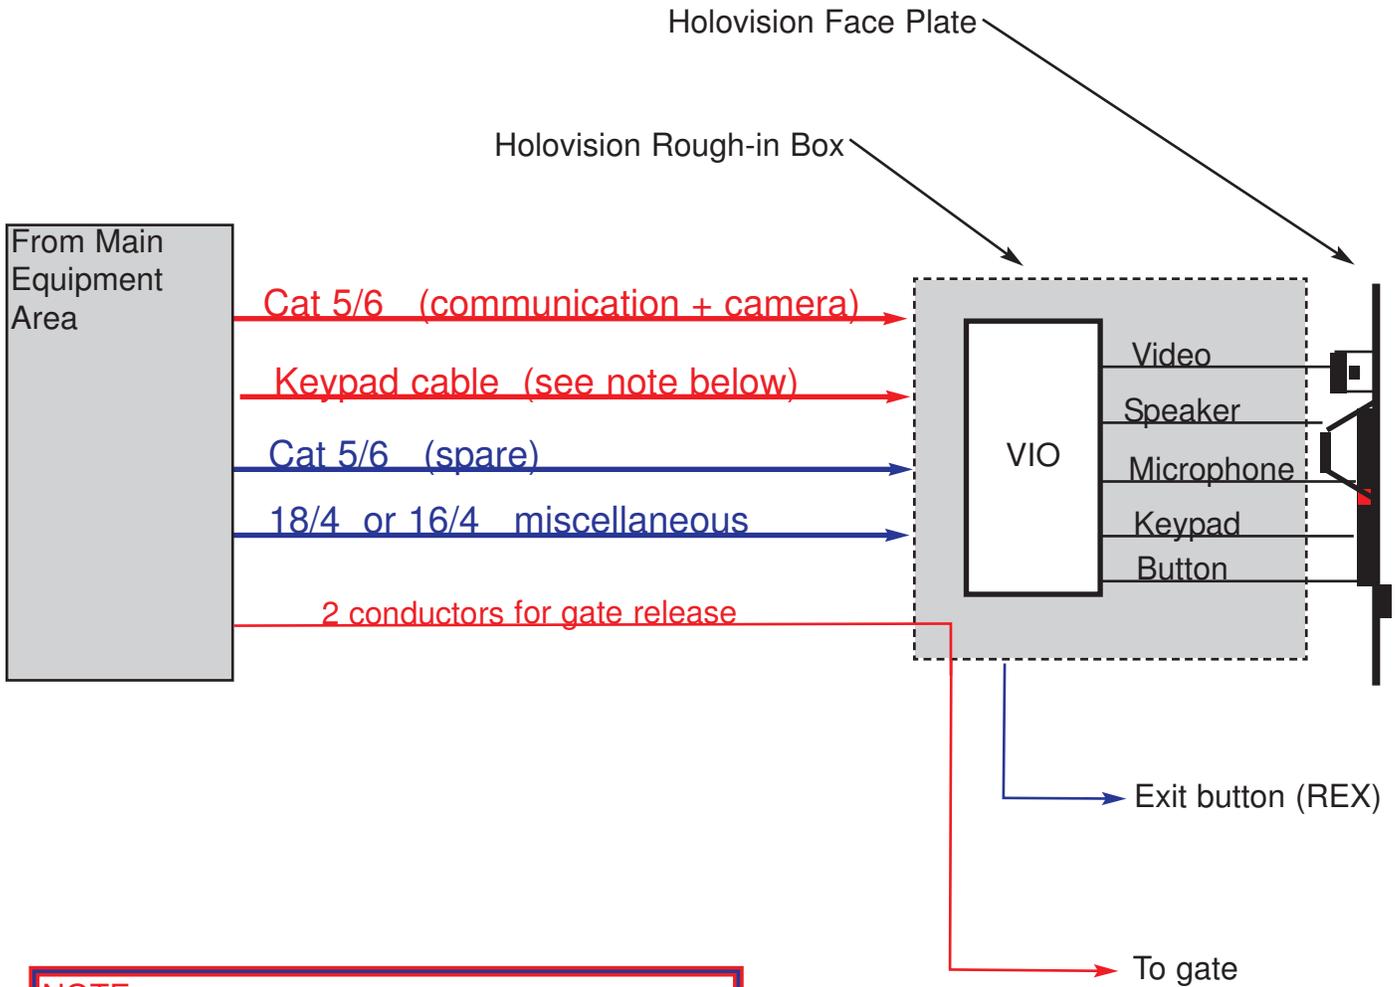

**NOTE:**  
Wires shown in red are the minimum required  
Wires shown in blue are recommended

## Wiegand Keypad:

### Cable Distance

Wiegand or Clock-and-Data interface: 500 feet


### Recommended cable

Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent

# Prewire for 600, 700, 800, and 900 Series

For Models 600, 605, 607, 608, 700, 705, 707, 708, 800, 805, 900

For the following combinations: 6XX-S12-VIK, 7XX-S12-VIK, 8XX-S12-VIK and 9XX-S12-VIK

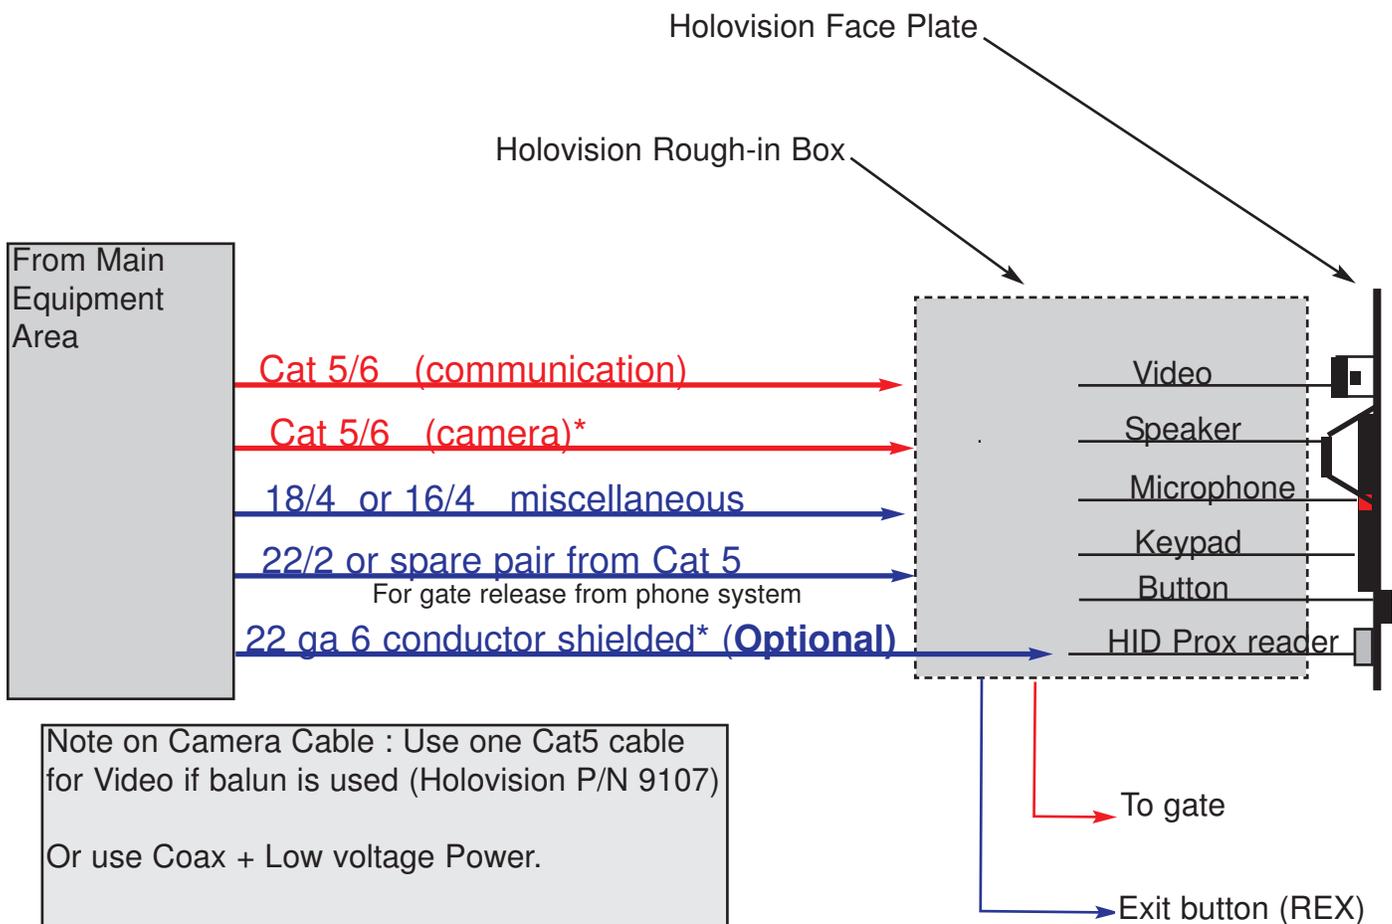

Note on Camera Cable : Use one Cat5 cable for Video if balun is used (Holovision P/N 9107)  
Or use Coax + Low voltage Power.

**NOTE:**  
Wires shown in red are the minimum required  
Wires shown in blue are recommended

Wire for gate release from phone system is required, but it can be a spare pair from Cat5/6

## Wiegand Prox Reader: (optional)

### Cable Distance

Wiegand or Clock-and-Data interface: 500 feet


### Recommended cable

Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent

# Prewire for 600, 700, 800, and 900 Series

For Models 600, 605, 607, 608, 700, 705, 707, 708, 800, 805, 900

For the following combinations: 6XX-W-VIO, 7XX-W-VIO, 8XX-W-VIO and 9XX-W-VIO

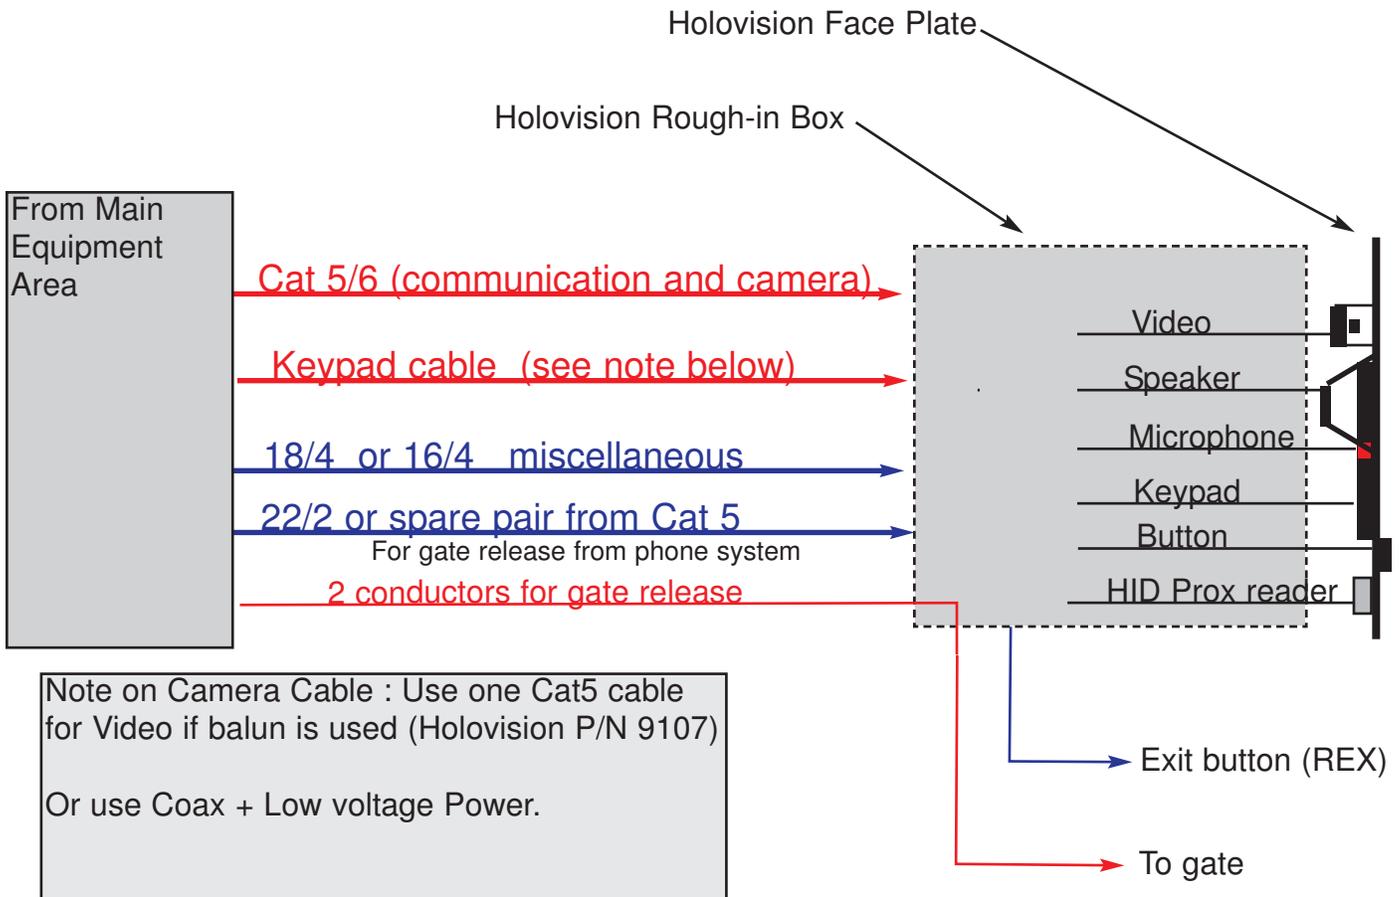

Note on Camera Cable : Use one Cat5 cable for Video if balun is used (Holovision P/N 9107)  
Or use Coax + Low voltage Power.

**NOTE:**  
Wires shown in red are the minimum required  
Wires shown in blue are recommended

Wire for gate release from phone system is required, but it can be a spare pair from Cat5/6

## Wiegand Prox Reader: (optional)

### Cable Distance

Wiegand or Clock-and-Data interface: 500 feet


### Recommended cable

Alpha 1295, Belden 5503FE 5 conductor, 22 AWG stranded with overall shield or equivalent

# Door Station Rough-in

---

600, 700, 800, and 900 series


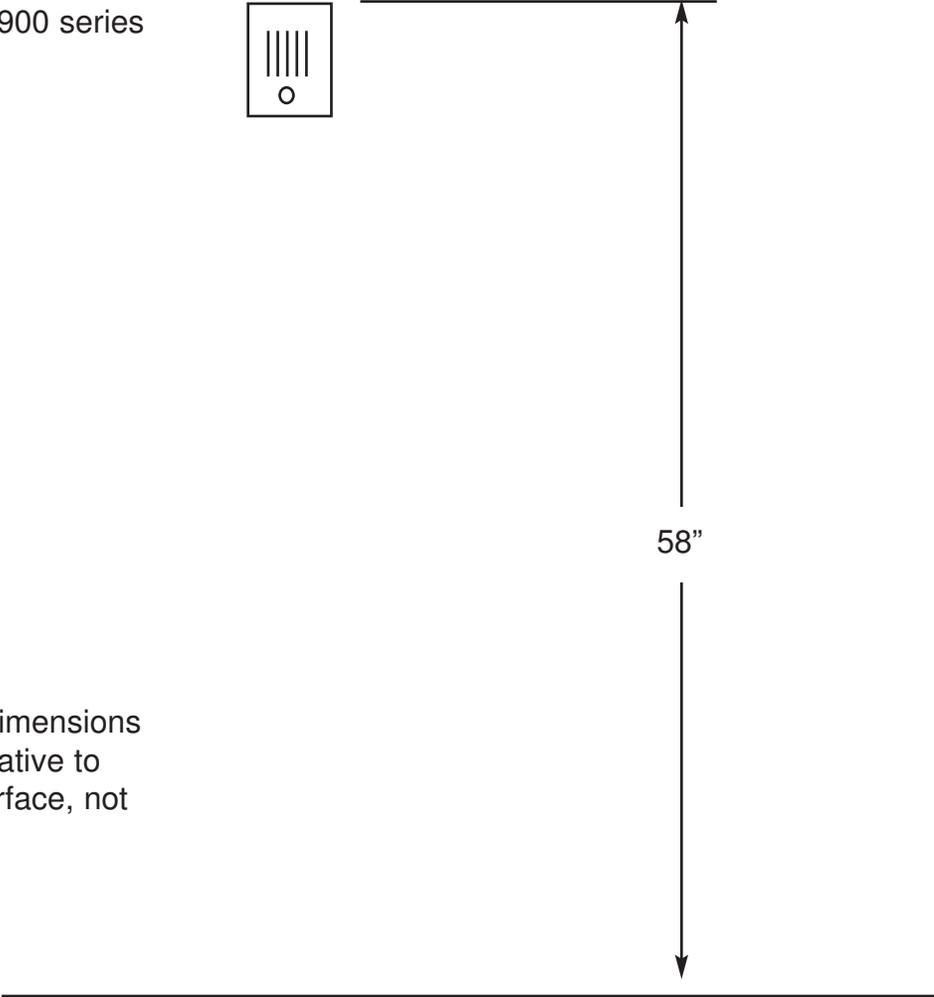


58"



NOTE: All dimensions given are relative to "finished" surface, not rough grade.

# Installation Details - 300, 600 and 800 Series

---

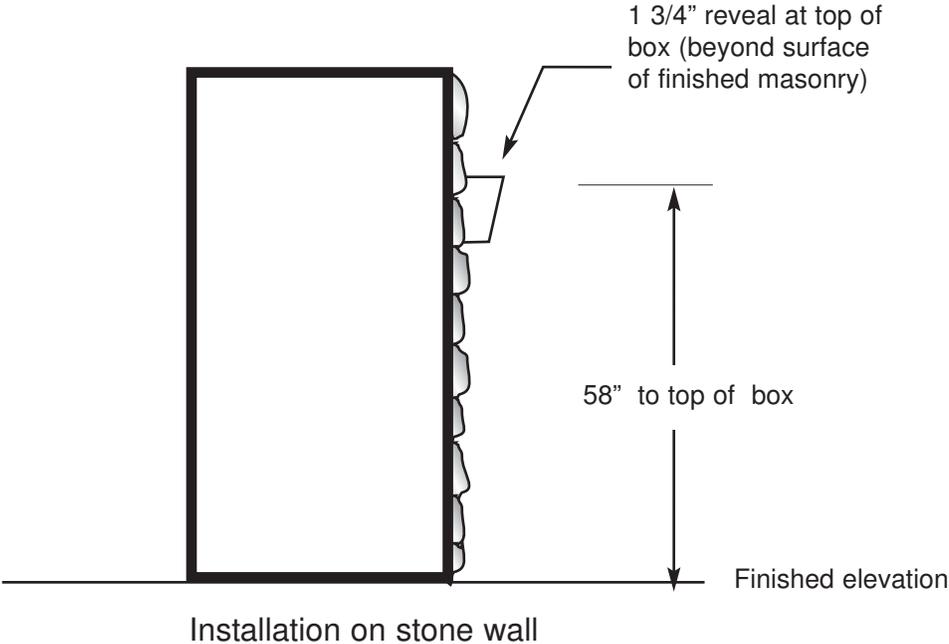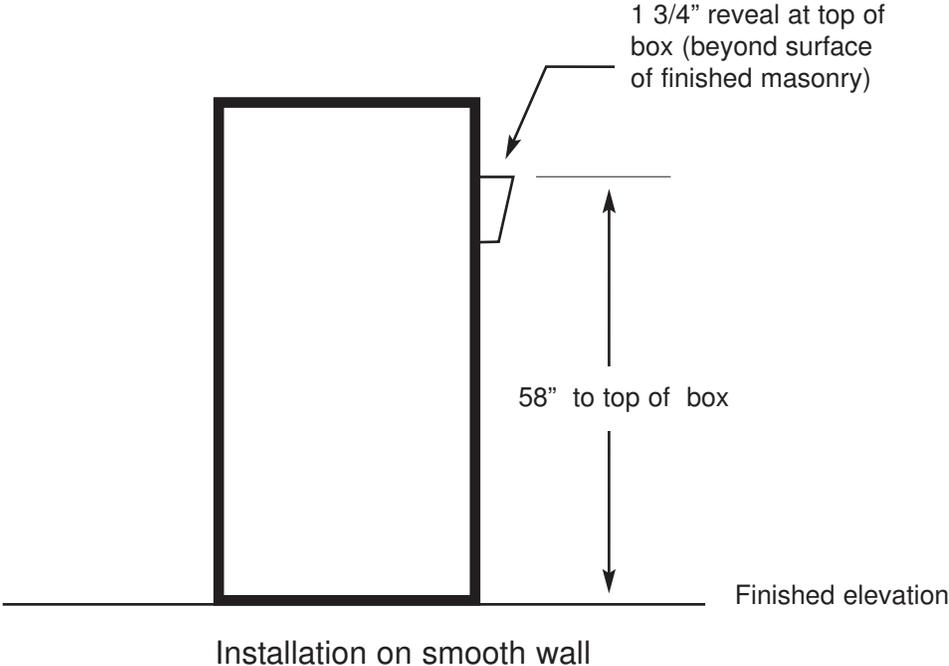

# Installation Details - 2 Piece Gooseneck

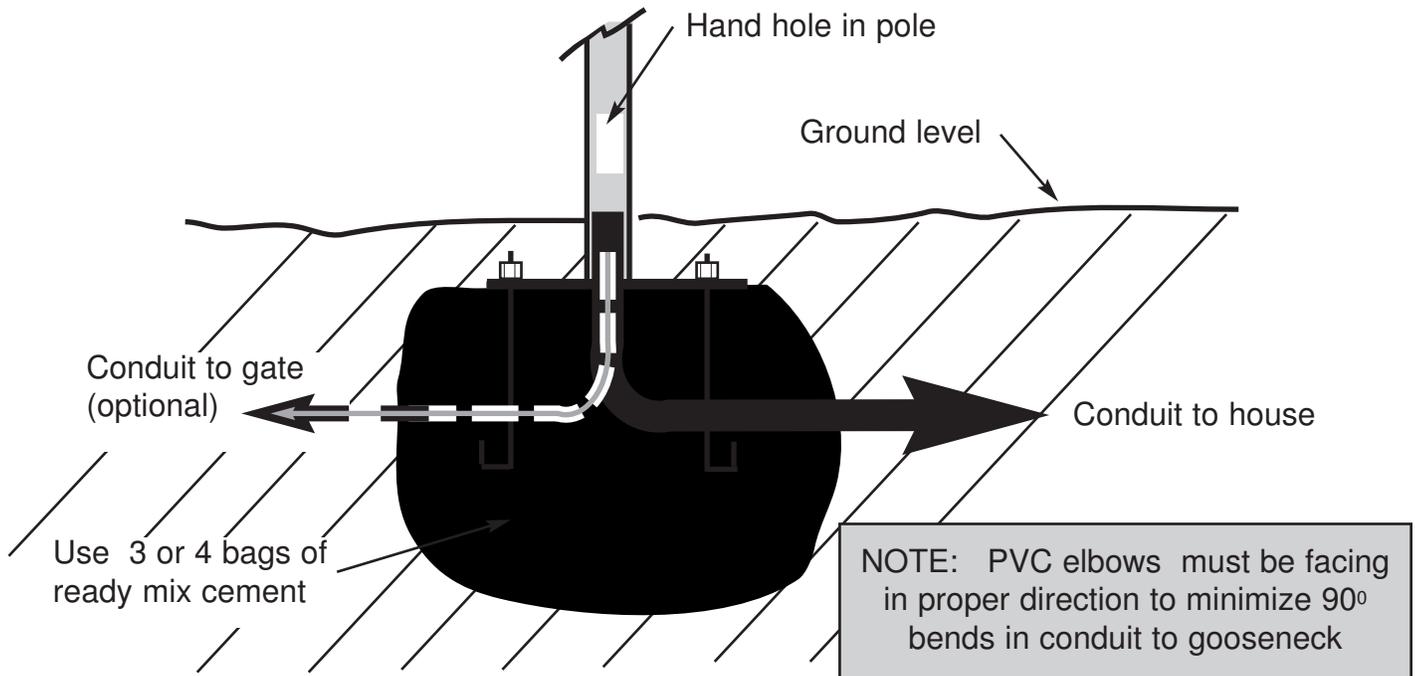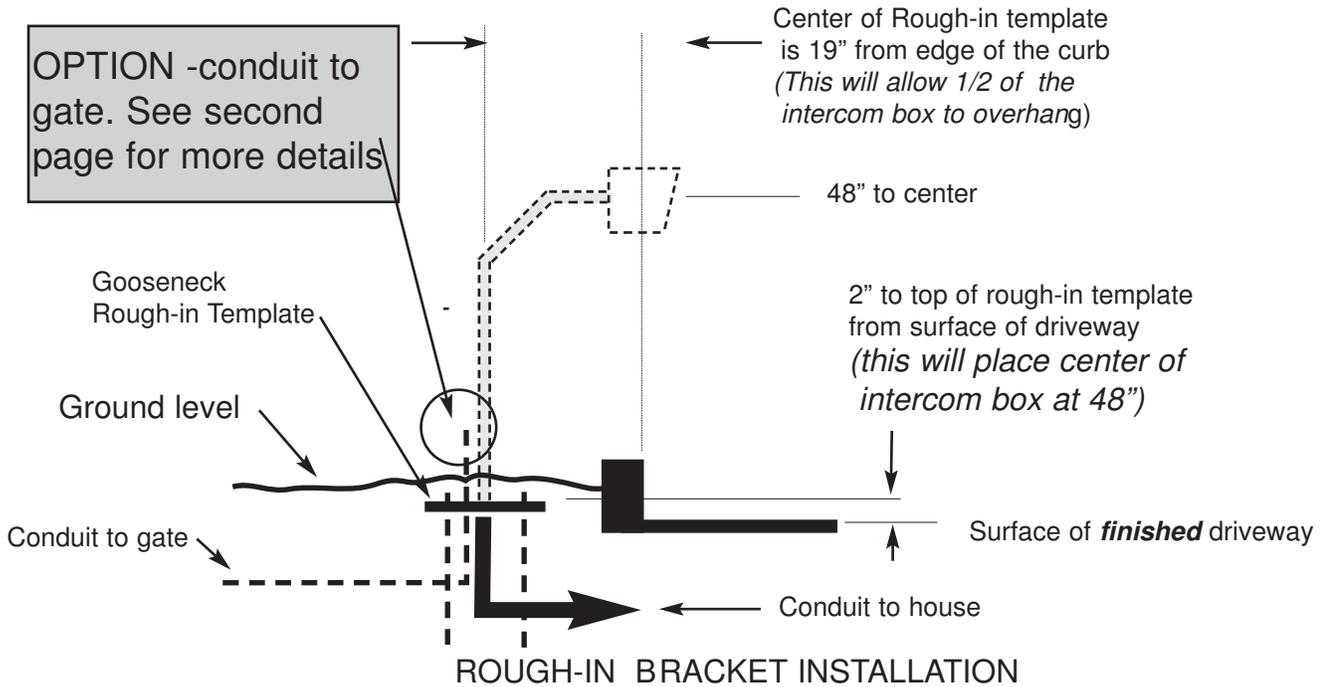

DETAIL OF ATTACHMENT OF POLE ONTO BASE

# Installation Details - 2 Piece Gooseneck

Optional application with 2 conduits

