Prewire for Models 102, 200, 202, 303, 505, 506

Prewire for all “Pan”, “TES2”, ‘’Vik”, “Elan”, Mitel”, etc.

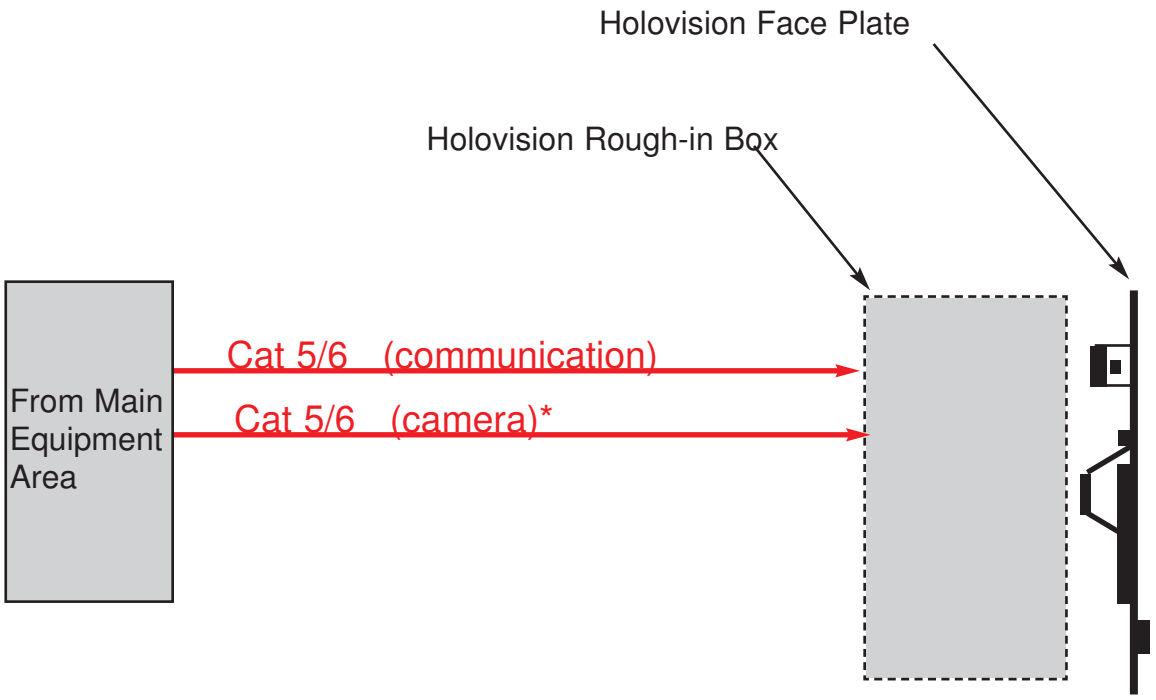

NOTE:
Wires shown in red are the minimum required

Note on Camera Cable : Use one Cat5 cable for Video if balun is used (Holovision P/N 9107)

Or use Coax + Low voltage Power.

This document is property of Holovision, and may not be reproduced without permission.

Prewire for Model 200-VIO2, 202-VIO2

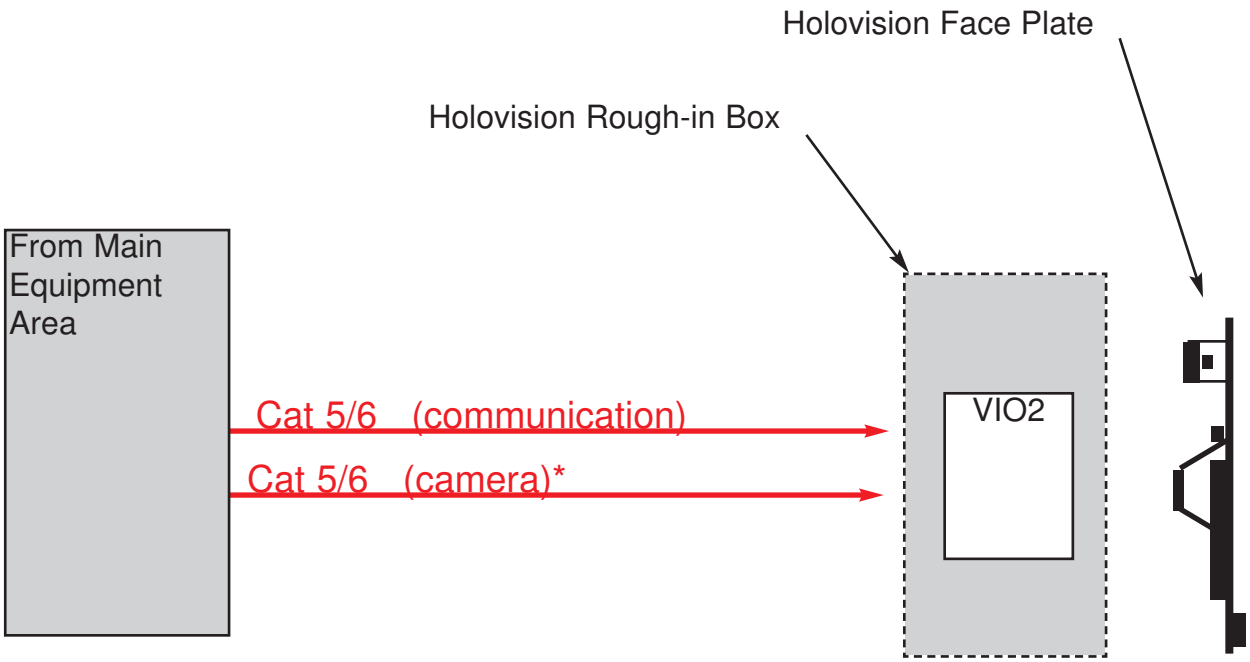

NOTE:
Wires shown in red are the minimum required

Note on Camera Cable : Use one Cat5 cable for Video if balun is used (Holovision P/N 9107)

Or use Coax + Low voltage Power.

This document is property of Holovision, and may not be reproduced without permission.

Prewire for Model 303-VIO, 413-VIO, 414-VIO, 423-VIO, 424-VIO

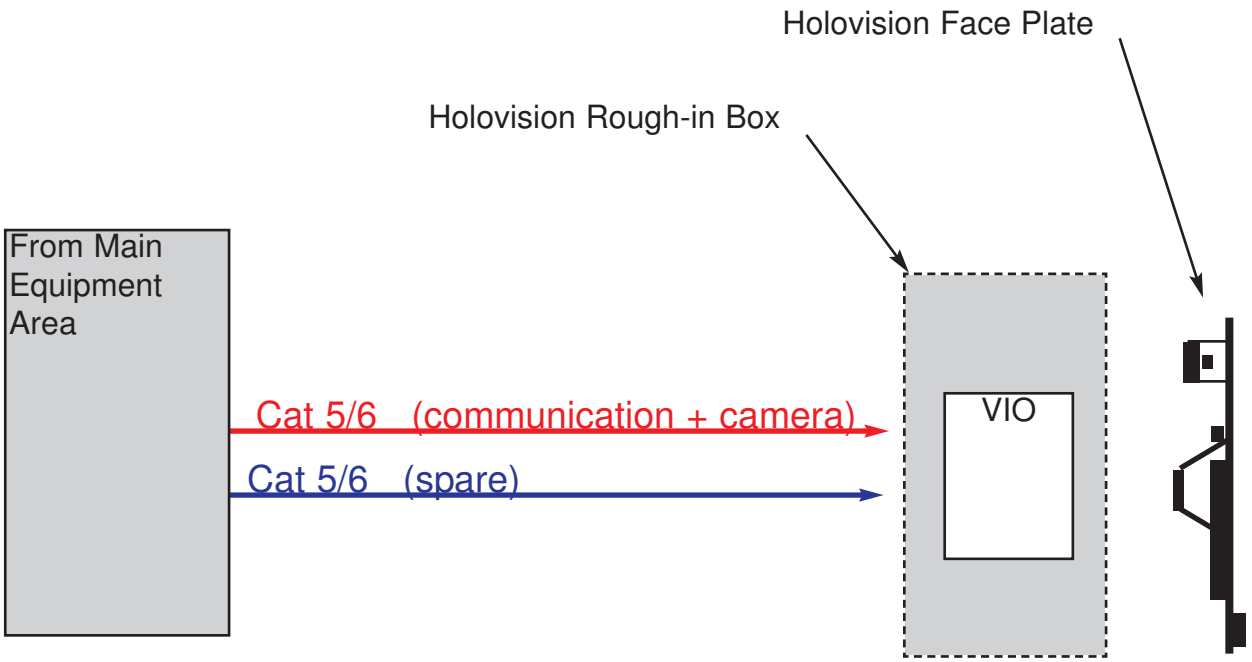

NOTE:
Wires shown in red are the minimum required

Wires shown in blue are optional

This document is property of Holovision, and may not be reproduced without permission.

Door Station Rough-in

Model 102

Model 200, 202, 413, 414, 505, 506

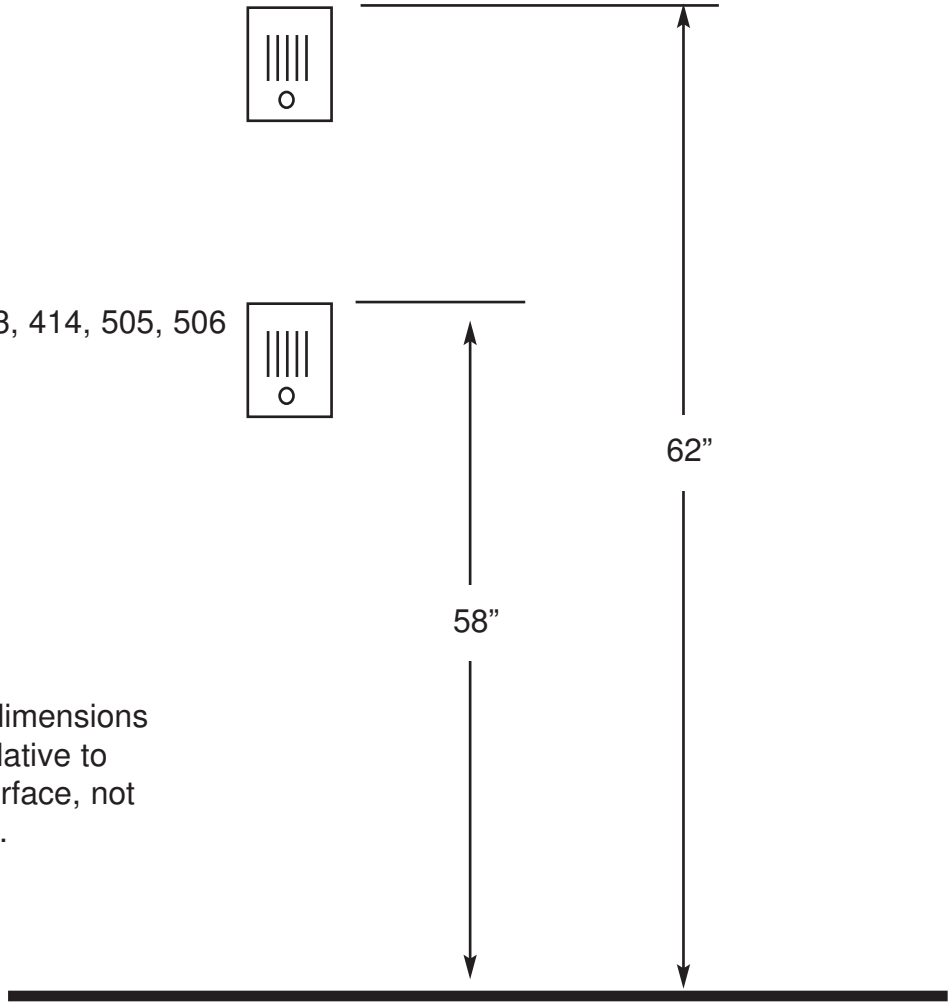

NOTE: All dimensions given are relative to “finished” surface, not rough grade.

This document is property of Holovision, and may not be reproduced without permission.

Installation Details - 300 and 600 Series

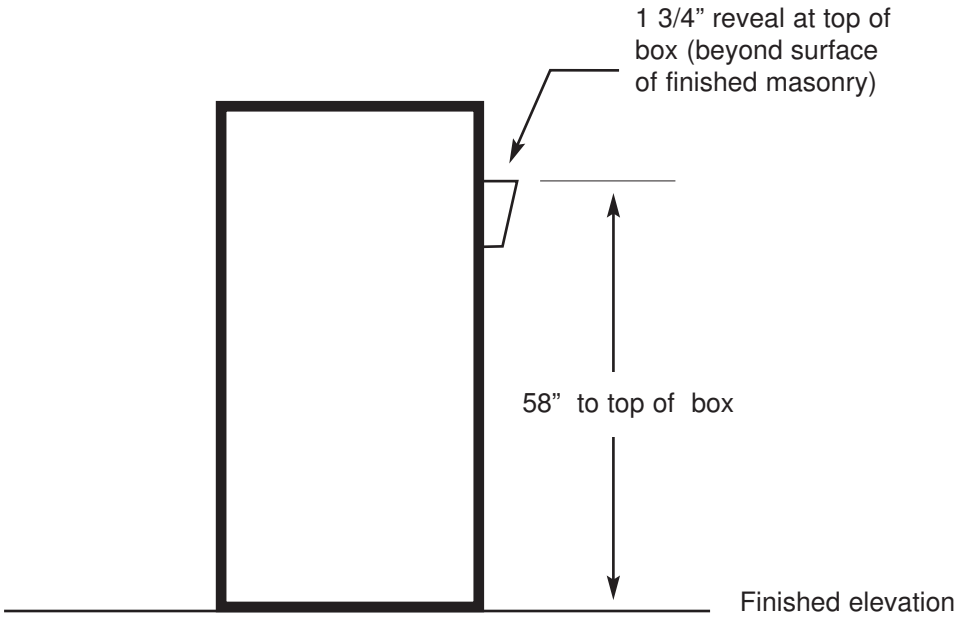

Installation on smooth wall

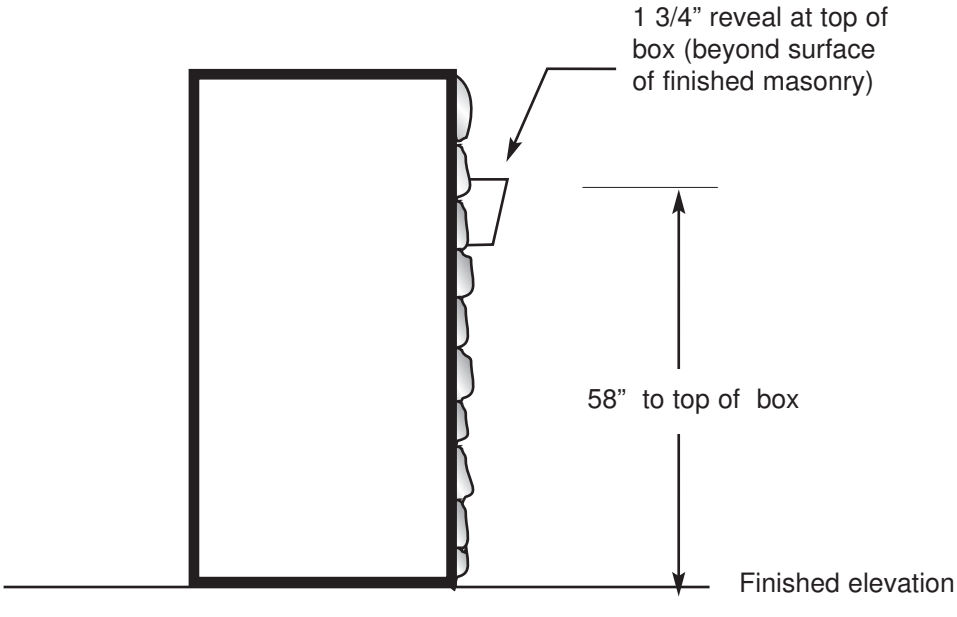

Installation on stone wall

This document is property of Holovision, and may not be reproduced without permission.

Installation Details - 2 Piece Gooseneck

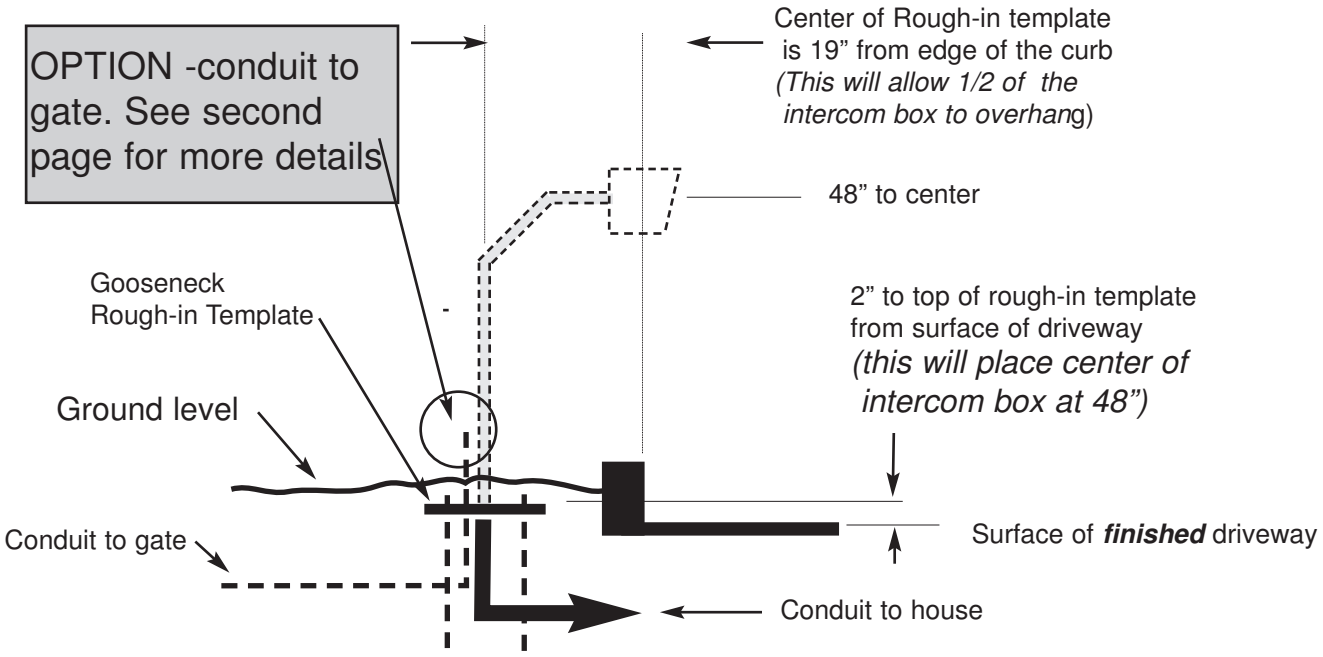

ROUGH-IN BRACKET INSTALLATION

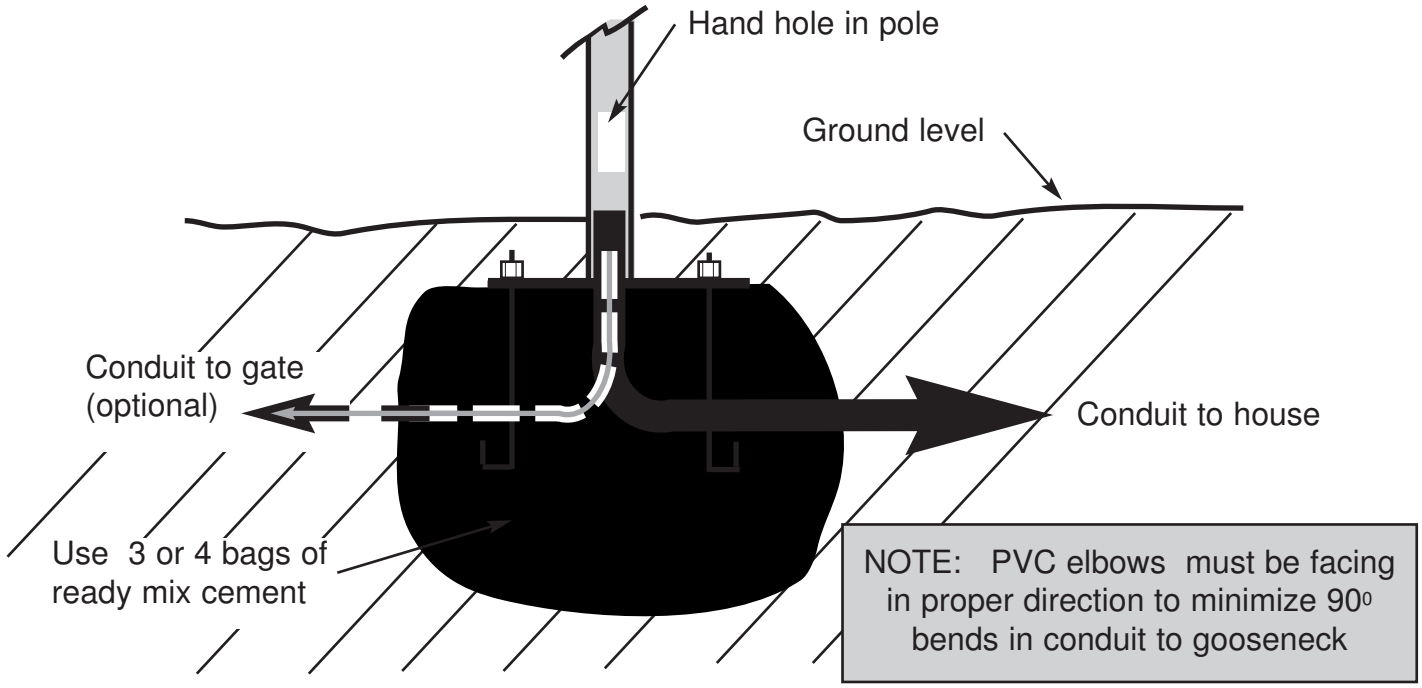

DETAIL OF ATTACHMENT OF POLE ONTO BASE

This document is property of Holovision, and may not be reproduced without permission.

Installation Details - 2 Piece Gooseneck

Optional application with 2 conduits

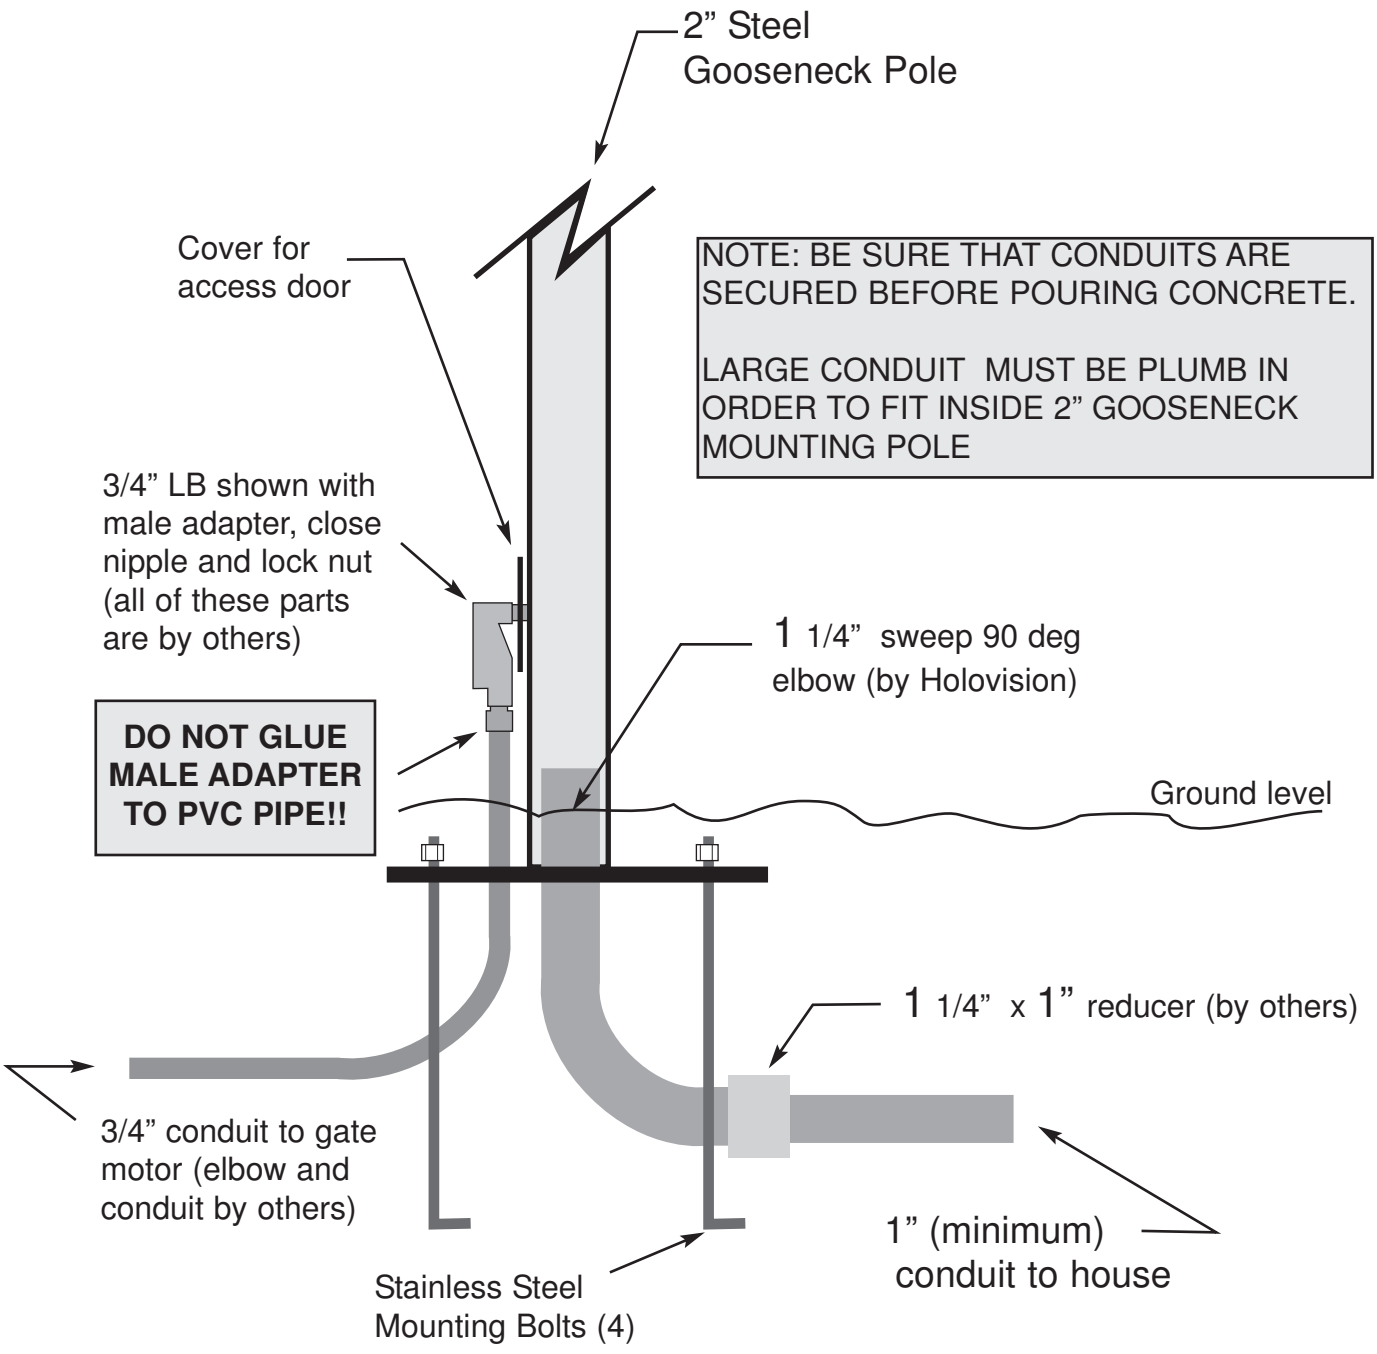

NOTE: BE SURE BOTH CONDUITS ARE POINTED IN THE DIRECTION THAT WILL MINIMIZE THE USE OF ELBOWS!

This document is property of Holovision, and may not be reproduced without permission.